

Operator's Manual



Label Printer

MACH1

| Family | Type |
|---------------|-------------|
| MACH | MACH1/200 |
| | MACH1/300 |

Edition: 02/2017 - **Part No.** 9009974

Copyright

This documentation as well as translation hereof are property of cab Produkttechnik GmbH & Co. KG.

The replication, conversion, duplication or divulgement of the whole manual or parts of it for other intentions than its original intended purpose demand the previous written authorization by cab Produkttechnik GmbH & Co. KG.

Trademark

Windows is a registered trademark of the Microsoft Corporation.

Editor

Regarding questions or comments please contact cab Produkt-technik GmbH & Co. KG.

Topicality

Due to the constant further development of our products discrepancies between documentation and product can occur.

Please check www.cab.de for the latest update.

Terms and conditions

Deliveries and performances are effected under the General conditions of sale of cab Produkttechnik GmbH & Co. KG.

Germany

cab Produkttechnik
GmbH & Co KG
Postfach 1904
D-76007 Karlsruhe
Wilhelm-Schickard-Str. 14
D-76131 Karlsruhe
Telefon +49 721 6626-0
Telefax +49 721 6626-249
www.cab.de
info@cab.de

France

cab technologies s.a.r.l.
F-67350 Niedermodern
Téléphone +33 388 722 501
www.cab.de/fr
info.fr@cab.de

USA

cab Technology Inc.
Tyngsboro MA, 01879
Phone +1 978 649 0293
www.cab.de/us
info.us@cab.de

Asia 亚洲

cab Technology Co., Ltd.
希愛比科技股份有限公司
Junghe, Taipei, Taiwan
Phone +886 2 8227 3966
www.cab.de/tw
info.asia@cab.de

China 中国

cab (Shanghai)Trading Co., Ltd.
乾博(上海)貿易有限公司
Phone +86 21 6236-3161
www.cab.de/cn
info.cn@cab.de

Representatives in other countries on request

| | | |
|-----------|--|-----------|
| 1 | Introduction | 4 |
| 1.1 | Instructions..... | 4 |
| 1.2 | Intended Use..... | 4 |
| 1.3 | Safety Instructions..... | 5 |
| 1.4 | Environment..... | 5 |
| 2 | Device Overview..... | 6 |
| 2.1 | Unpacking and Box Content | 6 |
| 2.2 | Device Views..... | 7 |
| 2.2.1 | Front View | 7 |
| 2.2.2 | Rear View | 7 |
| 2.2.3 | Bottom View | 8 |
| 2.2.4 | The Internal View of Printer | 8 |
| 2.2.5 | The Printing Mechanism..... | 9 |
| 3 | Connecting and switching on the Device | 10 |
| 3.1 | Connecting the Printer | 10 |
| 3.1.1 | Connecting to the Power Supply | 10 |
| 3.1.2 | Connecting to a Computer..... | 11 |
| 3.2 | Switching on the Printer | 11 |
| 4 | Loading Material..... | 12 |
| 4.1 | Open the Printer..... | 12 |
| 4.2 | Loading / Replacing the Ribbon on the Printer | 12 |
| 4.2.1 | Ribbon Module Installation | 12 |
| 4.2.2 | Ribbon Supply Module | 13 |
| 4.2.3 | Ribbon Rewind Module | 14 |
| 4.3 | Loading / Replacing the Label Stock on the Printer | 15 |
| 4.4 | Function Test..... | 16 |
| 5 | Installing Software and Configuring the Printer | 17 |
| 5.1 | Installing the Printer Driver..... | 17 |
| 5.2 | Installing Labeling Software cablabel S3 Lite..... | 18 |
| 5.3 | Configuration of Printer Settings | 19 |
| 6 | Operation | 21 |
| 6.1 | Operation Panel | 21 |
| 6.2 | Error Alerts in Operation Panel | 22 |
| 6.3 | Label Calibration and Self Test | 23 |
| 7 | Maintenance | 25 |
| 7.1 | Cleaning | 25 |
| 7.1.1 | General Cleaning Information..... | 25 |
| 7.1.2 | Cleaning the Print Head | 25 |
| 7.2 | Troubleshooting..... | 26 |
| 8 | Accessories | 28 |
| 8.1 | Preparation Steps | 28 |
| 8.2 | Installing the Present Sensor | 30 |
| 8.3 | Installing the Cutter | 35 |
| 9 | Appendix..... | 39 |
| 9.1 | Technical Data..... | 39 |
| 9.2 | Interface | 41 |
| 9.3 | Reference to the EU Declaration of Conformity | 42 |
| 9.4 | FCC..... | 42 |
| 10 | Index..... | 43 |

1.1 Instructions

Important information and instructions in this documentation are designated as follows:



Danger!

Draws attention to an exceptionally great, imminent danger to your health or life due to hazardous voltages.



Danger!

Draws attention to a danger with high risk which, if not avoided, may result in death or serious injury.



Warning!

Draws attention to a danger with medium risk which, if not avoided, may result in death or serious injury.



Caution!

Draws attention to a danger with low risk which, if not avoided, may result in minor or moderate injury.



Attention!

Draws attention to possible dangers, material damage or loss of quality.



Note!

Advices to make work routine easier or on important steps to be carried out.



Environment!

Gives you tips on protecting the environment.



Handling instruction



Reference to section, position, illustration number or document.



Option (accessories, peripheral equipment, special fittings).

Time Information in the display.

1.2 Intended Use

- The device is manufactured in accordance with the current technological status and the recognized safety rules. However, danger to the life and limb of the user or third parties and/or damage to the device and other tangible assets can arise during use.
- The device may only be used for its intended purpose and if it is in perfect working order, and it must be used with regard to safety and dangers as stated in the operating manual.
- The device printer is intended exclusively for printing suitable materials that have been approved by the manufacturer. Any other use or use going beyond this shall be regarded as improper use. The manufacturer/supplier shall not be liable for damage resulting from unauthorized use; the user shall bear the risk alone.
- Usage for the intended purpose also includes complying with the operating manual, including the manufacturer's maintenance recommendations and specifications.



Note!

The complete documentation is included in the scope of delivery on DVD, and can also currently be found in the Internet.

1.3 Safety Instructions

- The device is configured for voltages of 100 to 240 V AC. It only has to be plugged into a grounded socket.
- Only connect the device to other devices which have a protective low voltage.
- Switch off all affected devices (computer, printer, accessories) before connecting or disconnecting.
- The device may only be used in a dry environment, do not expose it to moisture (sprays of water, mists, etc.).
- Do not use the device in an explosive atmosphere.
- Do not use the device close to high-voltage power lines.
- If the device is operated with the cover open, ensure that people's clothing, hair, jewelry etc. do not come into contact with the exposed rotating parts.
- The device or parts of it, especially the printheads can become hot while printing. Do not touch during operation, and allow to cool down before changing material and before disassembly.
- Risk of crushing when closing the cover. Touch the cover at the outside only. Do not reach into the swivel range of the cover.
- Perform only those actions described in this operating manual.
Work going beyond this may only be performed by trained personnel or service technicians.
- Unauthorized interference with electronic modules or their software can cause malfunctions.
- Other unauthorized work on or modifications to the device can also endanger operational safety.
- Always have service work done in a qualified workshop, where the personnel have the technical knowledge and tools required to do the necessary work.
- There are various warning stickers on the device. They draw your attention to dangers.
Warning stickers must therefore not be removed, as then you and other people cannot be aware of dangers and may be injured.
- The maximum sound pressure level LpA is less than 70 dB(A).



Danger!

Danger to life and limb from power supply.

- ▶ **Do not open the device casing.**



Warning!

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

1.4 Environment



Obsolete devices contain valuable recyclable materials that should be sent for recycling.

- ▶ Send to suitable collection points, separately from residual waste.

The modular construction of the printer enables it to be easily disassembled into its component parts.

- ▶ Send the parts for recycling.



The electronic circuit board of the device is equipped with a lithium battery.

- ▶ Take old batteries to collection boxes in shops or public waste disposal centers.

2.1 Unpacking and Box Content

1. Lift the printer out of the box via the straps.
2. Check printer for damage which may have occurred during transport.
3. Set up printer on a level surface.
4. Check delivery for completeness.

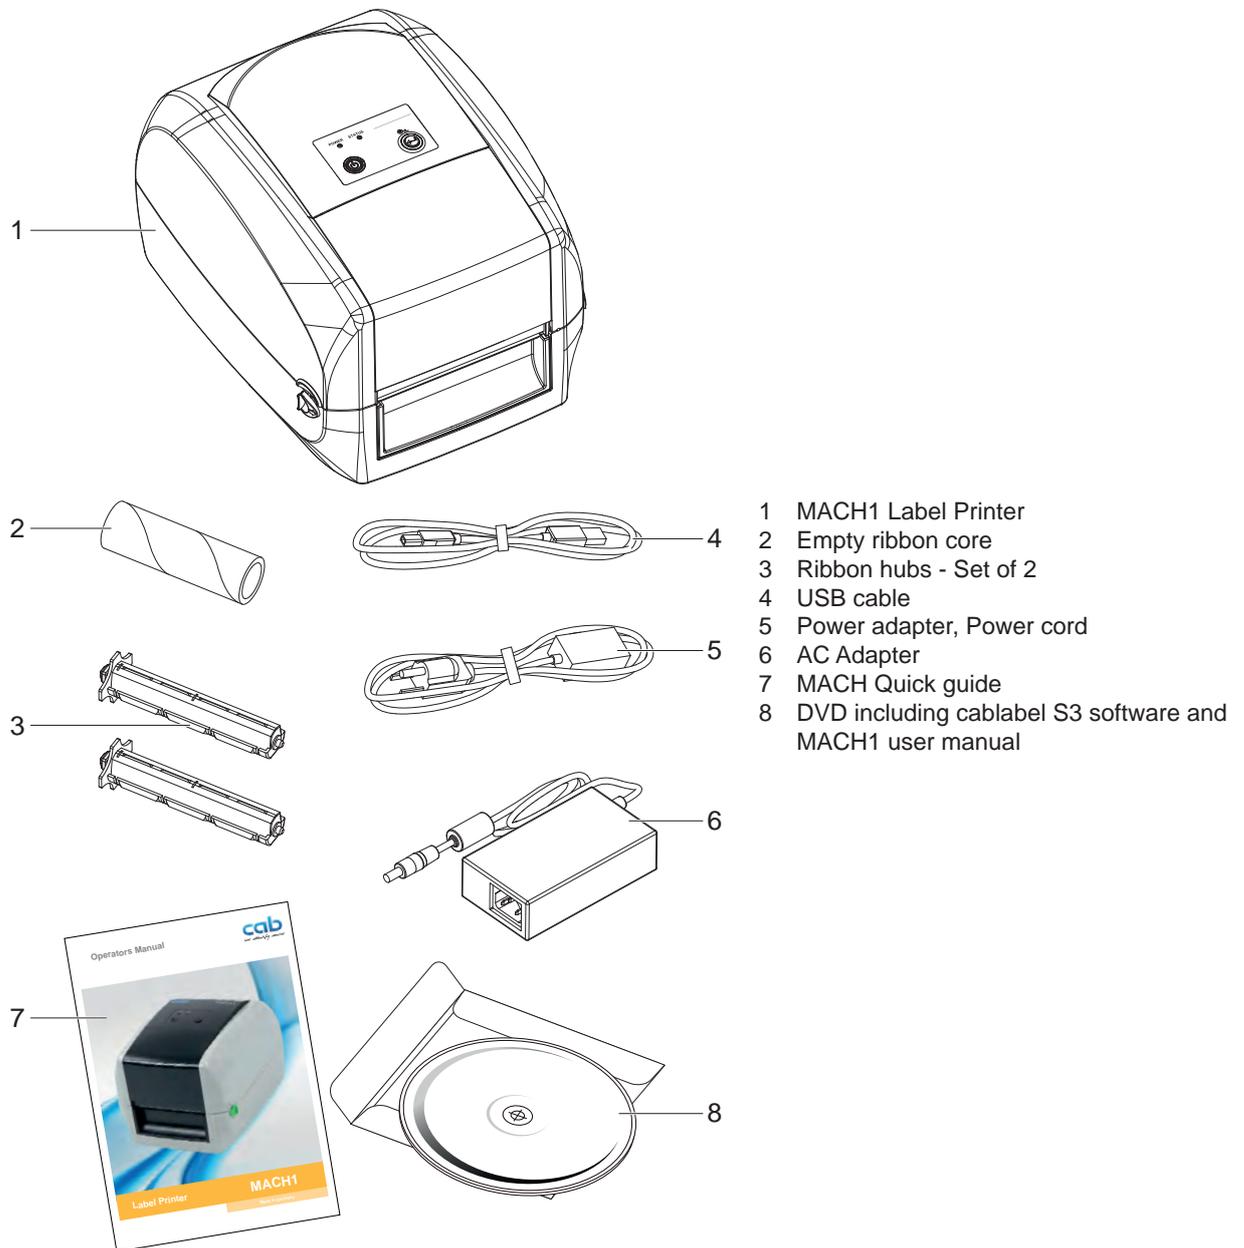


Fig. 1 Box Content



Note!

Please keep the original packaging in case the printer must be returned.



Attention!

The device and printing materials will be damaged by moisture and wetness.

► Set up transfer printers only in dry locations protected from splash water.

2.2 Device Views

2.2.1 Front View

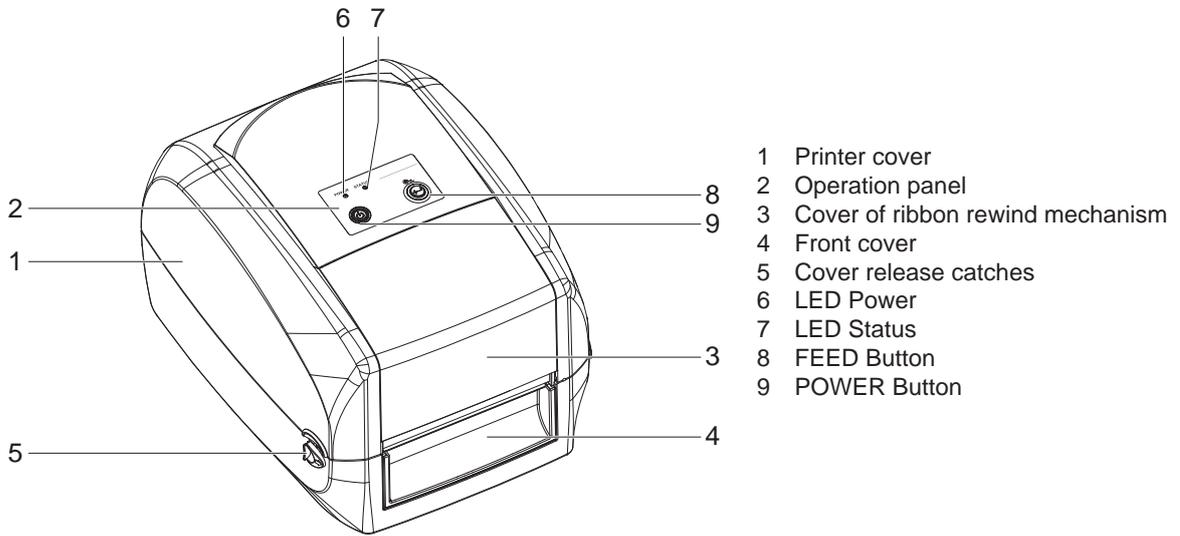


Fig. 2 Front View

2.2.2 Rear View


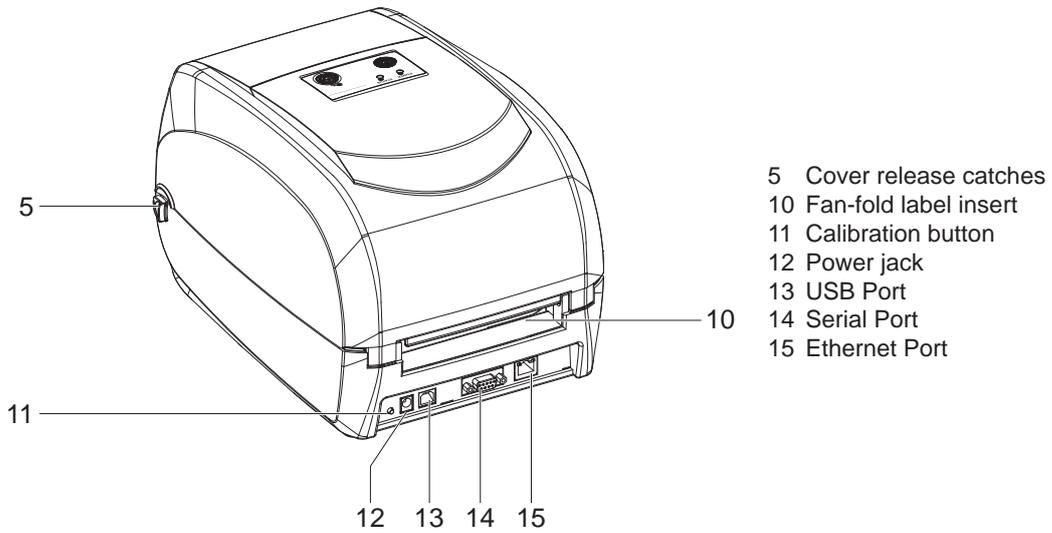


Fig. 3 Rear View

2.2.3 Bottom View

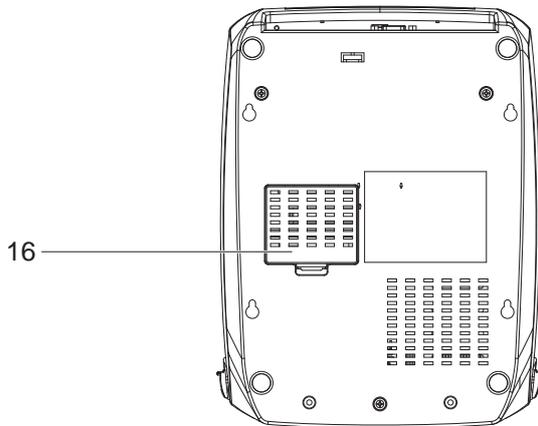

16 Cover of the module connection jacks


Fig. 4 Bottom View



Note!

The cut-outs at the device bottom are not intended for wall-mount use.

2.2.4 The Internal View of Printer

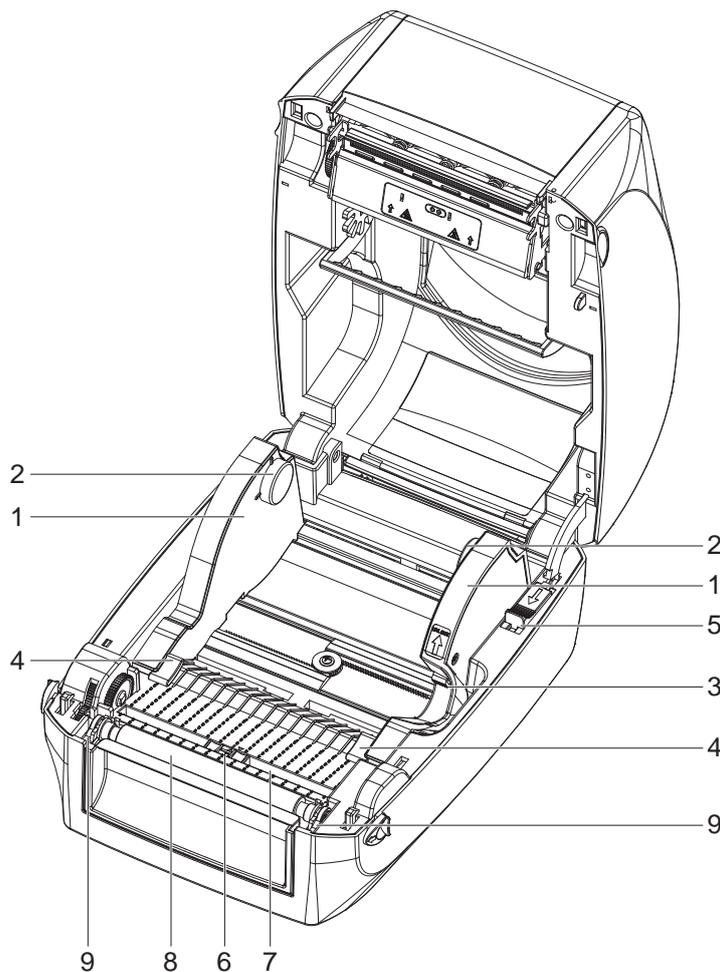

- 1 Label guide plate
- 2 Label supply hub
- 3 Release catch for opening the label supply hub
- 4 Label Guide
- 5 Release catch for closing the printer cover
- 6 Label sensor
- 7 Guide track
- 8 Platen
- 9 Platen lockers

Fig. 5 Internal View

2.2.5 The Printing Mechanism

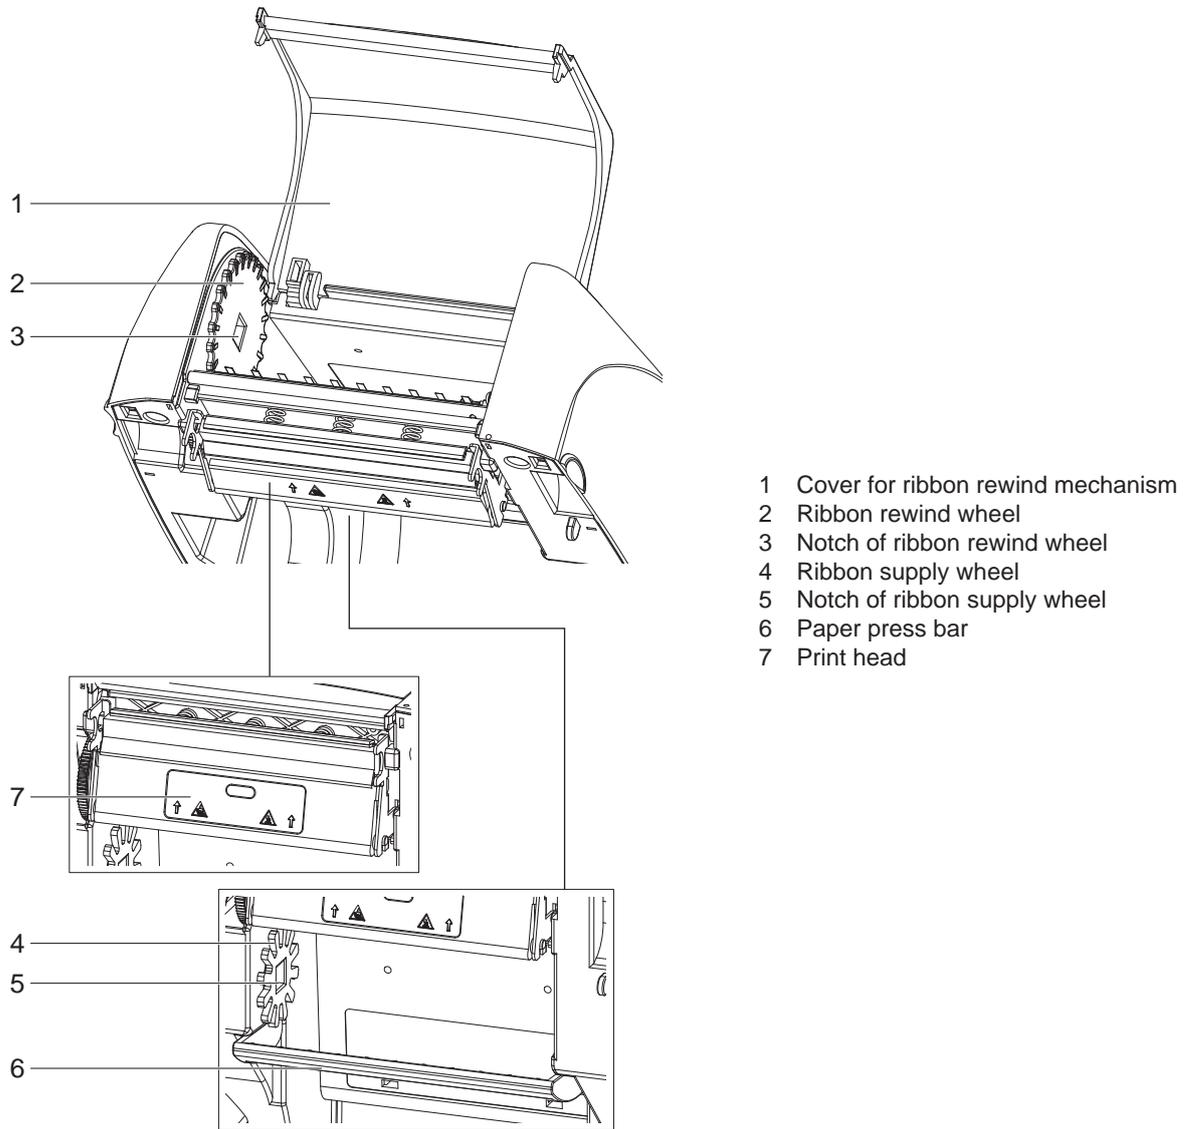


Fig. 6 Printing Mechanism

3.1 Connecting the Printer

**Attention!**

Risk of damage to devices!

Inadequate or no grounding can damage devices and cause malfunctions during operation.

► Ensure that all computers and cables connected to the printer are grounded.

**Note!**

The printer is equipped with a wide area power unit. The device can be operated with a supply voltage of 230 V~/50 Hz or 115 V~/60 Hz without adjustment.

3.1.1 Connecting to the Power Supply

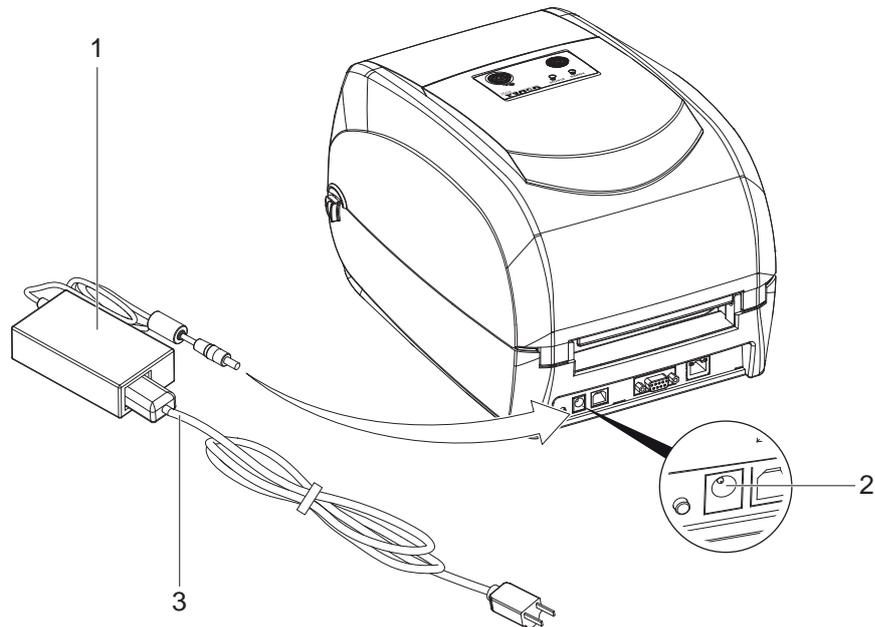


Fig. 7 Connecting Printer to the Power Supply

1. Check that the device is switched off.
2. Plug the jack of the AC adapter (1) into the power connection socket (2).
3. Plug the power cable (3) into the AC adapter (1).
4. Plug the power cable (3) into a grounded socket.

**Note!**

The design of the power plug differs according to the intended country of use.

3.1.2 Connecting to a Computer



Attention!

Loss of material!

The RS-232 interface is unsuitable for fast transmission of changing data.

- ▶ Use USB or Ethernet interface for print operation.
- ▶ Use the RS232 interface only for setting up the printer.

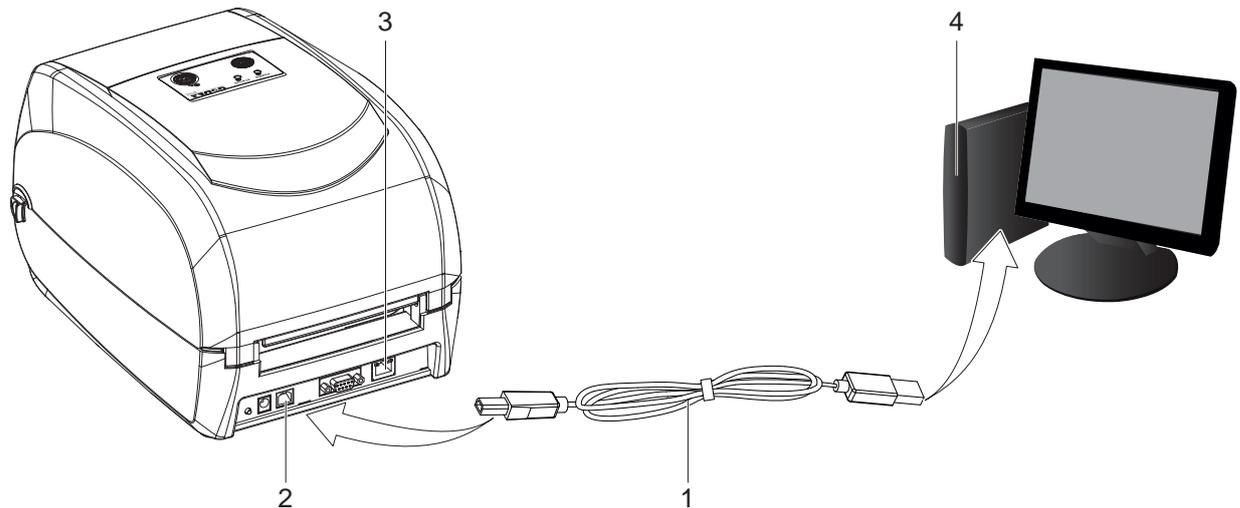


Fig. 8 Connect the printer to the computer via USB or Ethernet.

- ▶ Plug the USB cable (1) into the USB interface (2) on the printer.
- or
- ▶ Plug the Ethernet cable into the Ethernet interface (3) on the printer.
- ▶ Connect the cable to the corresponding interface on the computer (4).

3.2 Switching on the Printer

When all connections have been made correctly:

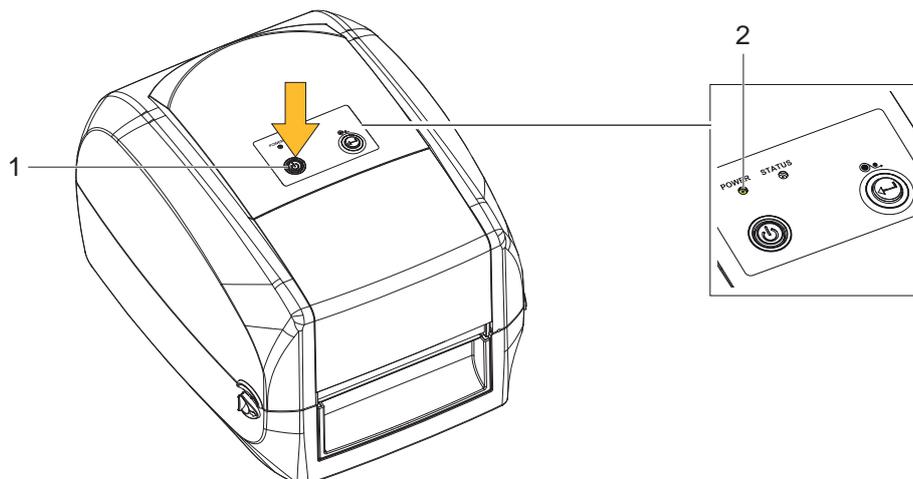


Fig. 9 Switching on the Printer

- ▶ Switch the printer on at the POWER button (1).
- The printer performs a system test, and then shows the system status with the LED Status (2).



Note!

If the printer is connected correctly, the Power LED lights green after the system test.

4.1 Open the Printer

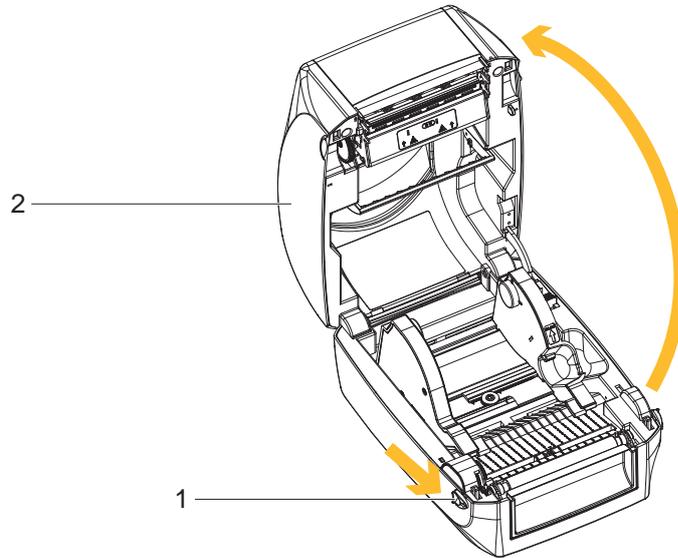


Fig. 10 Open the Printer

1. Place the printer on a flat surface.
2. Pull the cover release catches (1) on both sides of the printer.
3. Raise the cover of the casing (2) and lock it into the catch.



Note!

The printing mechanism is lifted up with the printer cover.

4.2 Loading / Replacing the Ribbon on the Printer

4.2.1 Ribbon Module Installation

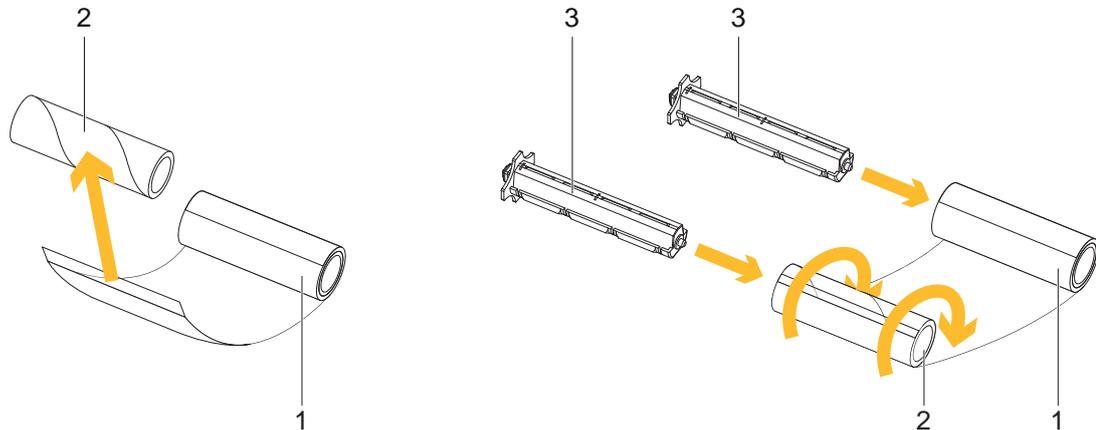


Fig. 11 Ribbon Module Installation

1. Attach the ribbon (1) to the empty ribbon core (2) with the adhesive strip at the end of the ribbon.
2. Insert the ribbon hub (3) into empty ribbon core (2) and new ribbon (1).
3. Wind the ribbon around the empty ribbon core (2) for 2 to 3 circles.

4.2.2 Ribbon Supply Module

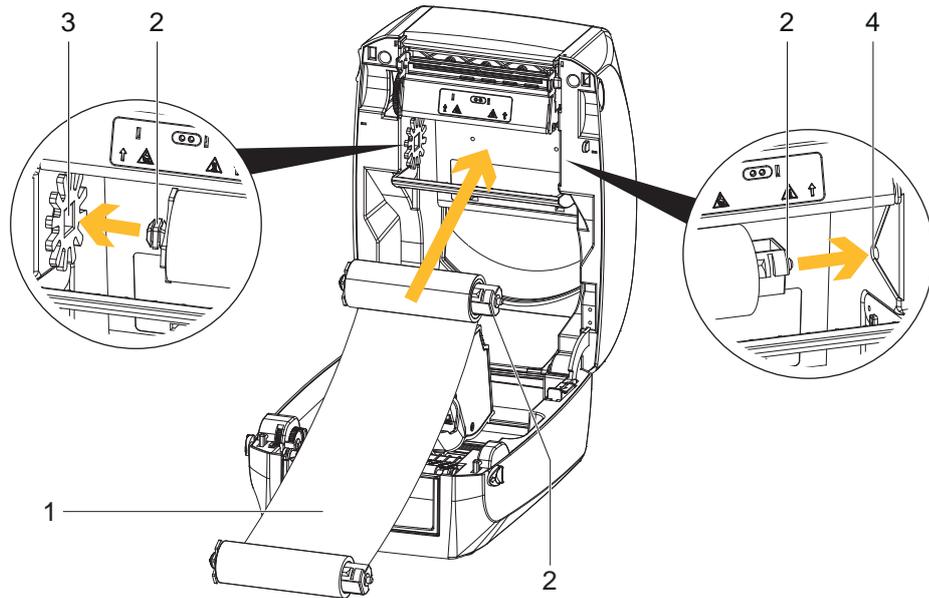


Fig. 12 Loading the ribbon module on the ribbon supply wheel

1. Unroll about 30 cm of the ribbon (1) from the roll, and place it as shown in the illustration.
2. Insert the ribbon hub and the ribbon roll (2) into the left side (3) of the ribbon supply module. Ensure that the stud on the ribbon hub slots into the recess.
3. Insert the ribbon hub with the ribbon roll (2) into the right side (4) of the ribbon supply module. Ensure that the stud on the ribbon hub slots into the recess.

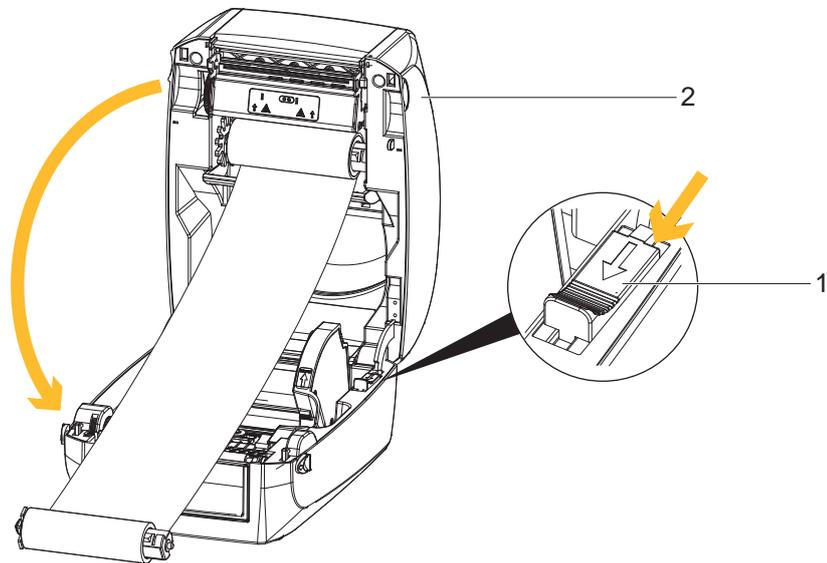


Fig. 13 Close the Printer Cover

4. Unlock the release catch (1) to close the printer cover.
5. Close the cover of the casing (2), and let it click shut.

4.2.3 Ribbon Rewind Module

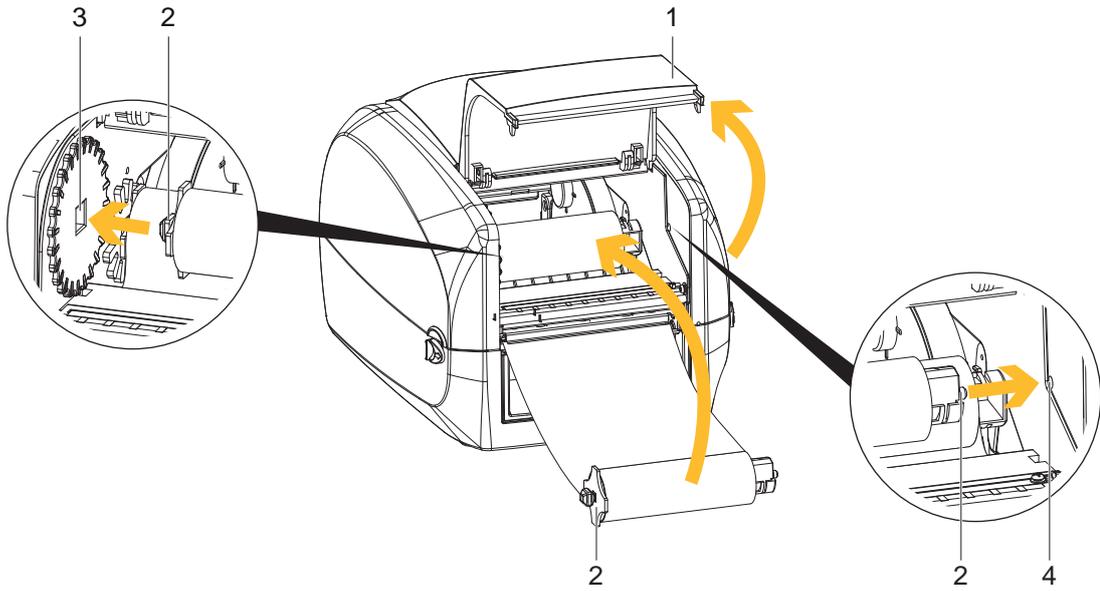


Fig. 14 Loading the ribbon module on the ribbon rewind wheel

1. Open the cover for Ribbon rewind mechanism (1).
2. Insert the ribbon hub with the ribbon core (2) into the left side (3) of the ribbon rewind module. Ensure that the stud on the ribbon hub slots into the recess.
3. Insert the ribbon hub with the ribbon core (2) into the right side (4) of the ribbon rewind module. Ensure that the stud on the ribbon hub slots into the recess.

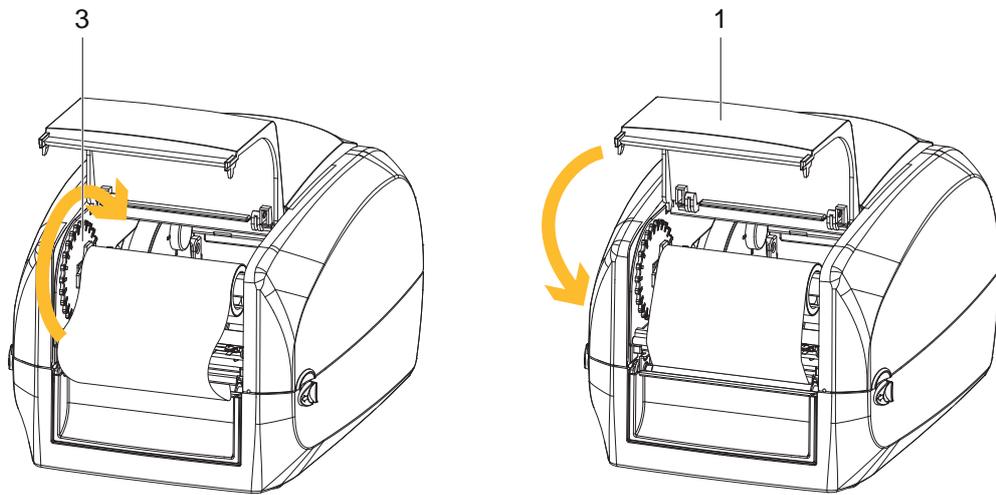


Fig. 15 Tighten the ribbon and close the printer

4. Turn the ribbon rewind wheel (3) to tighten the ribbon until it has no wrinkles.
5. Close the cover for Ribbon rewind mechanism (1).

4.3 Loading / Replacing the Label Stock on the Printer

1. Open the printer ▷ 4.1 on page 12.

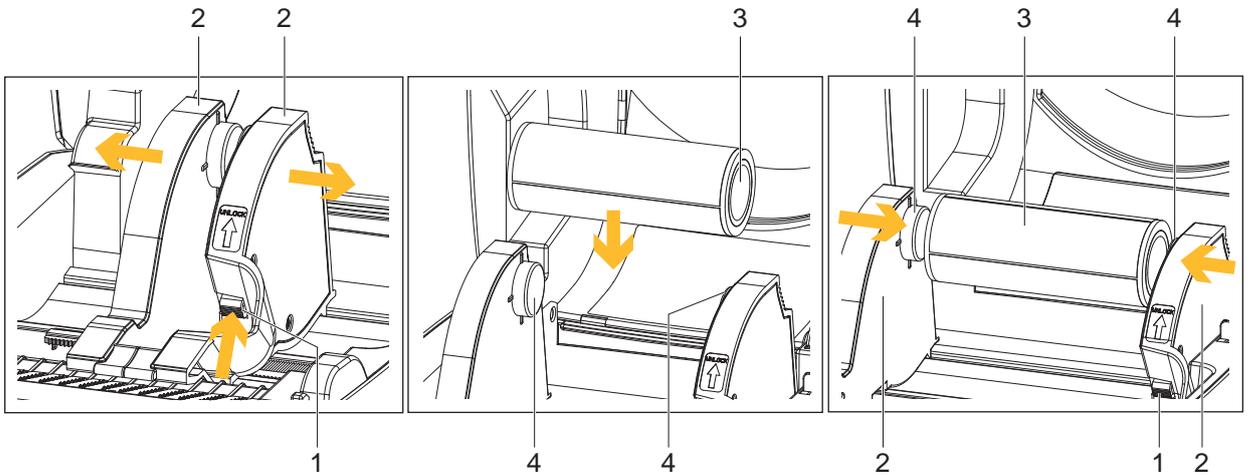


Fig. 16 Loading the label stock



Note!

The side label guide plates (2) can be shifted as long as the locking button (1) remains pressed.

2. Press the release catch for opening the label supply hub (1).
3. Pull to open the label guide plates (2).
4. Place the label stock (3) on label supply hubs (4). Make sure the label stock is aligned to both hubs.
5. Adjust the label guide plates (2) to fix the label width.
6. Release the locking button (1) and let it click into place.

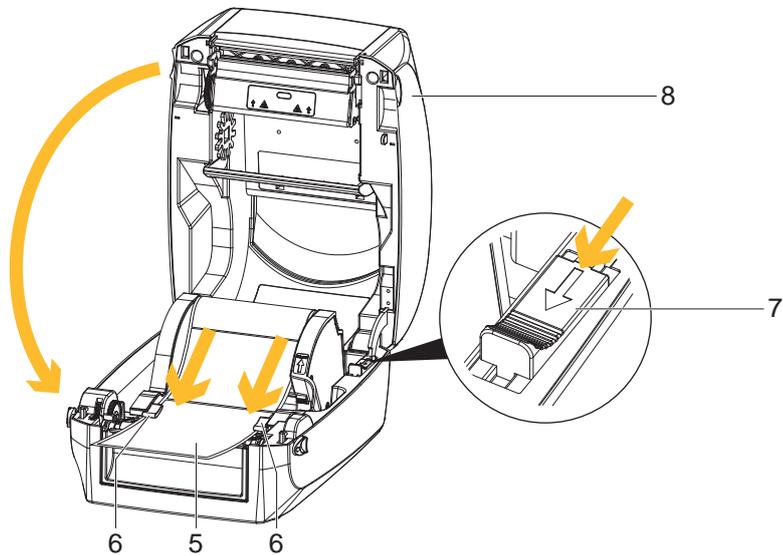


Fig. 17 Feed the label through the label guides and close the printer

7. Feed the Label (5) through the label guides (6) on both sides.
8. Unlock the release catch (7) to close the printer cover.
9. Close the cover of the casing (8), and let it click shut.

4.4 Function Test

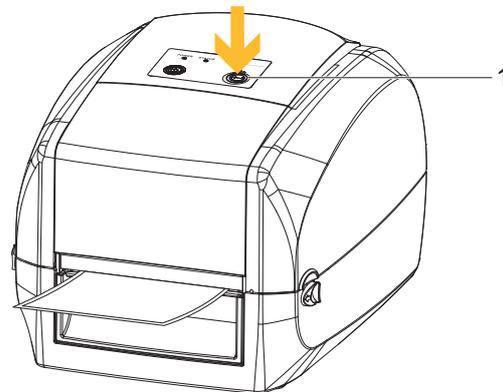


Fig. 18 Function Test

1. Connect the printer to the power supply.
2. Switch the printer on.
3. Press the FEED button (1).

If the label stock is inserted correctly, the labels are drawn in straight.

**Note!**

If the labels are drawn in skewed, check the seating of the ribbon and the label stock, and correct if necessary.

**Note!**

When Leporello labels (continuous material) are used the labels are drawn in by the feed on the back of the printer. It is not necessary to open the device.

5.1 Installing the Printer Driver




Note!


When the printer is connected via USB cable, the driver installation will be automatically made.

Insert the product DVD into the DVD drive of your computer, and enter this drive when you are prompted to enter a source for the driver during the installation.

1. Insert the Product DVD in the DVD drive of the host computer. The program should pop up automatically. You will see the Welcome screen first.
2. Choose "Drivers" on the Welcome screen.

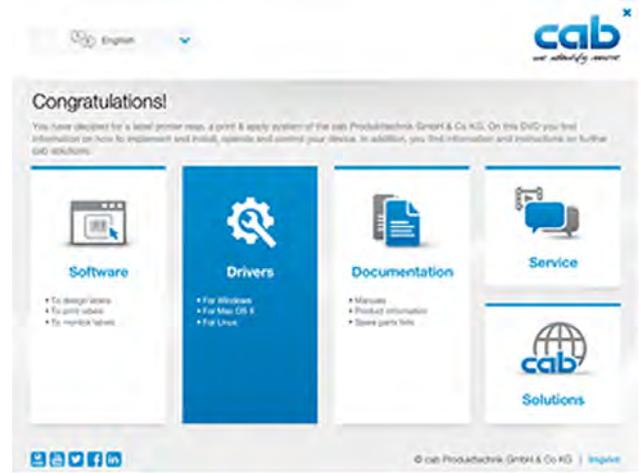

3. The "Drivers" screen appears. Click "Install driver" to continue.

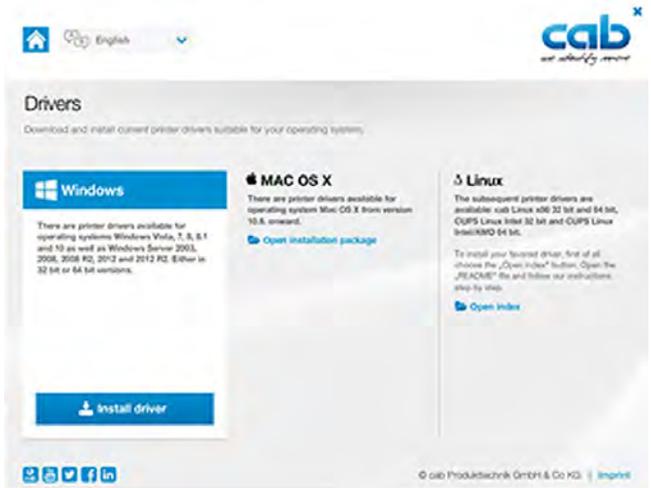

4. Follow the instructions on the screen. The Driver Wizard guides you through the installation procedure. Once the installation is complete, a summary of the printer settings is displayed. Check whether the printer settings are correct and click "Finish" to start copying the driver files.




5.2 Installing Labeling Software cablabel S3 Lite

**Note!**


To create your labels, you can use the software cablabel S3 Lite. This label design software is included on the product CD and is free of charge.

You can obtain further software solutions with an extended range of functions (e.g. cablabel S3 Pro) from the manufacturer.

1. Insert the Product DVD in the DVD drive of the host computer. The program should pop up automatically. You will see the Welcome screen first.
2. Choose "Software" on the Welcome screen.
3. Select on the product CD the software **cablabel S3 Lite** and press the icon "Install software" to start the installation.

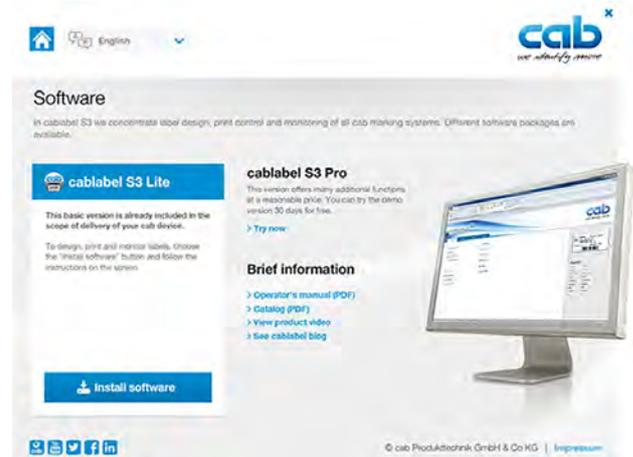

4. After the start of **cablabel S3 Lite** the MACH printer is available as a GDI device.

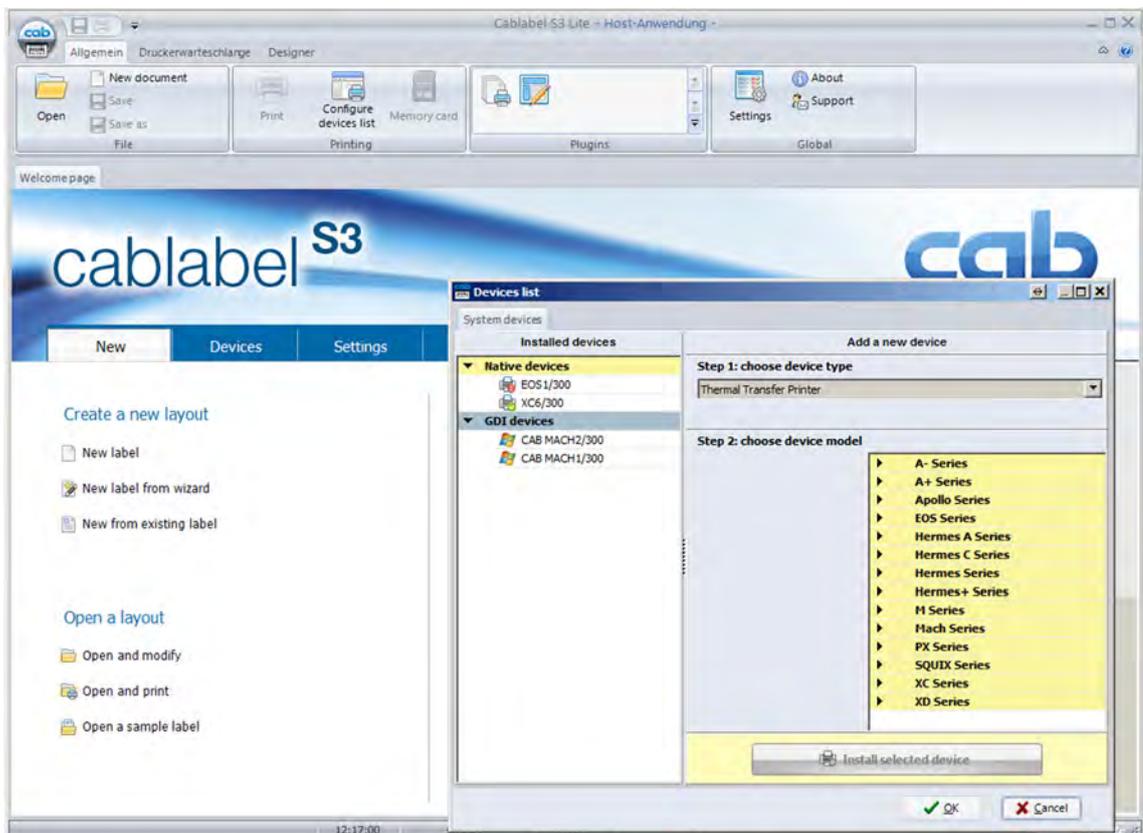

5.3 Configuration of Printer Settings

The Software Tool Mach1/2-Load



Note!
The software tool Mach1/2-Load is used to manage the printer settings and the configuration of the interfaces.


Starting the Tool Mach1/2-Load

- ▶ Insert the Product DVD in the DVD drive of the host computer.
- ▶ Start the Tool Mach1/2-Load by a double click



Printer Configuration


This tab allows you to configure and edit the settings of the connected printer.
Almost all important settings of the printer can be configured here.

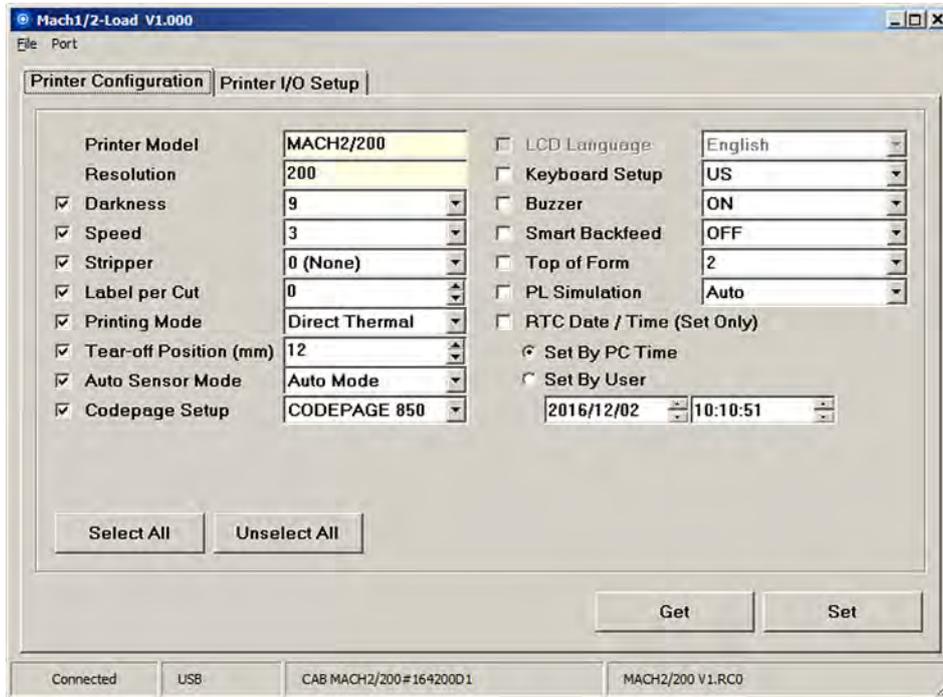


- ▶ Click "GET" to load the settings from the printer,
 - ▶ Click "SET" to send the settings to the printer. When you send only the selected parameters are transmitted.
- Under "File" you can save the settings in a configuration File, respectively load the settings from a file.

Printer I/O Setup

On this tab, you can make settings for the possible interfaces and send them to the printer.

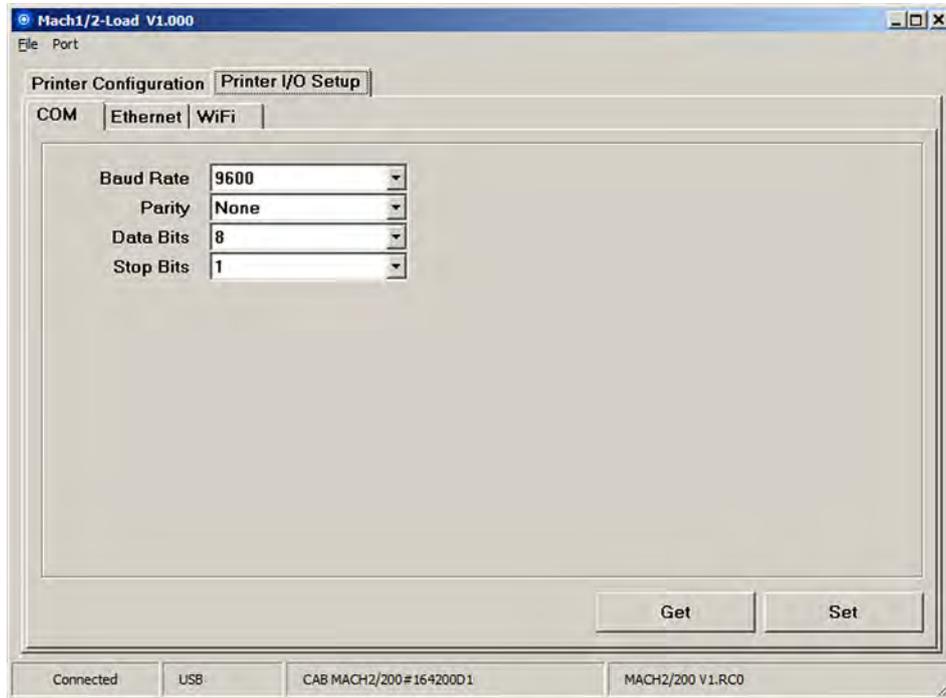

Port opens the "Port Setting". Here you have the possibility to search for all Mach1/2 models.

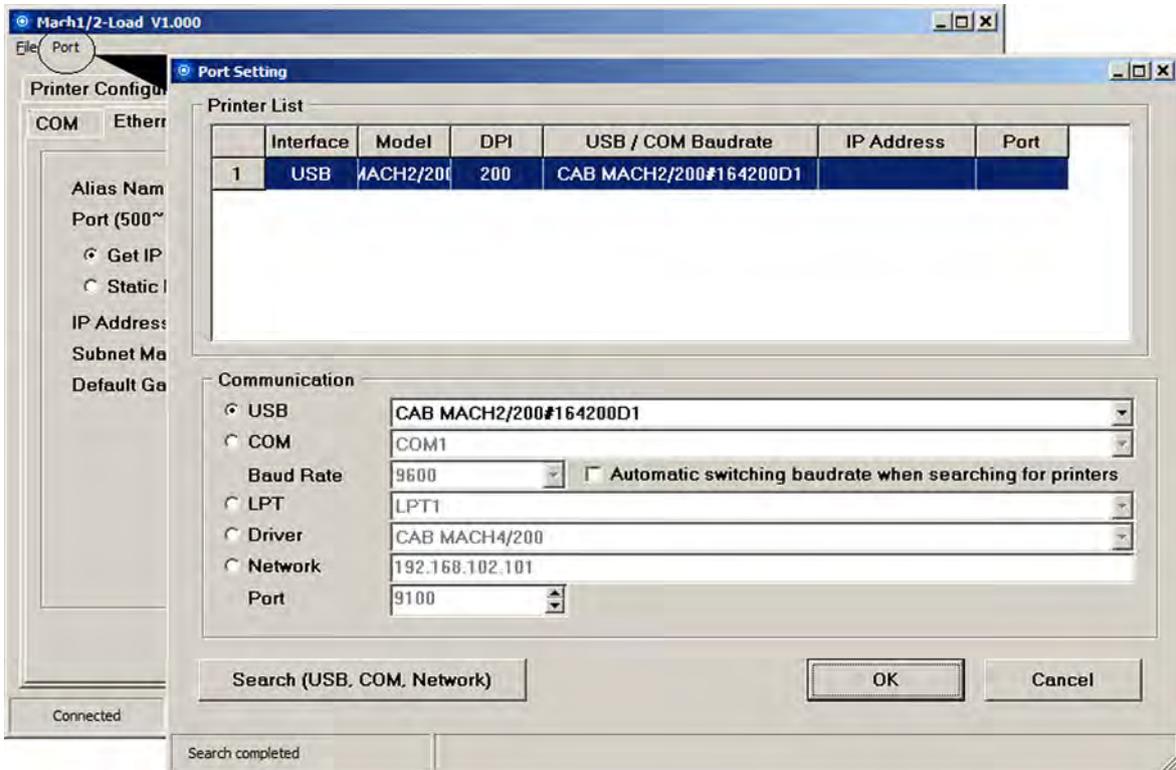

6.1 Operation Panel

Operation Panel Overview

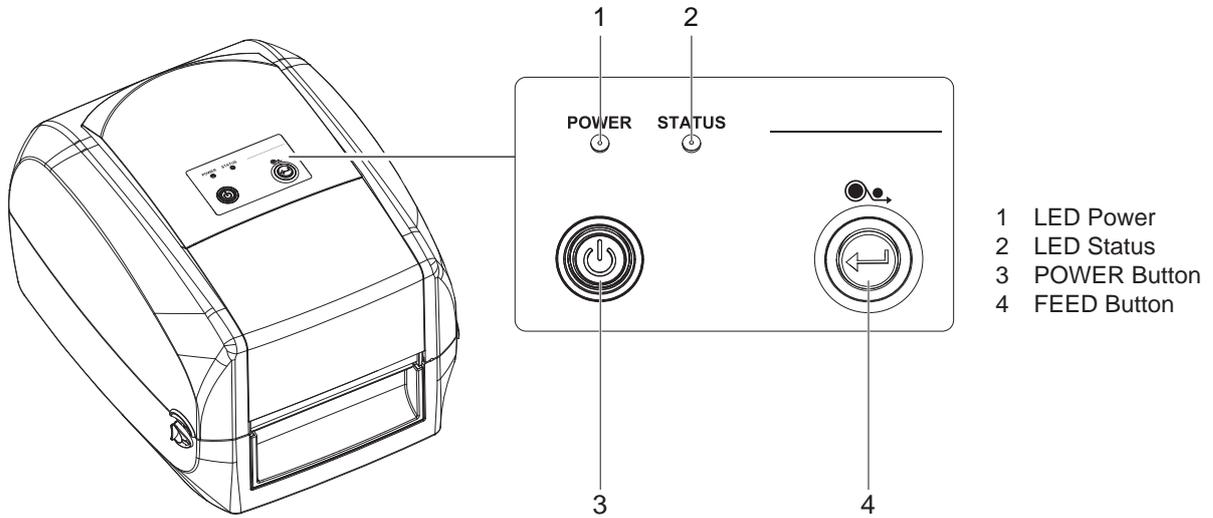


Fig. 19 Operation Panel Overview

POWER Button

- ▶ Press the POWER button (3) and the LED Power (1) lights up green. The printer is on “ Ready to print “ status now.
- ▶ When printer is turned on, keep pressing the POWER button (3) until the LED Power (1) lights off will turn the printer off.

FEED Button

When you press the FEED button (4), the printer moves the label to the defined stop position. If you are using continuous labels, pressing the FEED button will move label stock until you release the button again. If you are using individual labels, pressing the FEED button will move only one label.



Note! If the label does not stop at the correct position, you need to run the auto-detection function on the label stock. ▶ 6.3 on page 23.

LED Indicators

| LED Indicator | Status | Description |
|---------------|---------------------|--|
| Green | Standby / Status OK | The printer is ready for operation. |
| Red | Error | The printer has detected an error. ▶ 6.2 on page 22 |

Table 1 Status LED Indicators

6.2 Error Alerts in Operation Panel

In the event of a problem that prevents normal functioning of the printer, you will see an error message on LED indicators and hear some beep signals.

Error Light

Color:

- Red 

Flashing Frequency:

- Flashing 
- Light On 

| LED Indicator | | | | | |
|---|---|------------------|-------------|--|--|
| LED Power | LED Status | Type | Beeps | Description | Solution |
| |  | Print Head Error | 2 x 4 beeps | The printing mechanism is not closed correctly. | Open the print mechanism and close it again. |
|  |  | Print Head Error | None | High temperature at the print head. | Once the print head has cooled down, the printer switches to standby mode. |
| |  | Media Error | 2 x 3 beeps | No ribbon is installed and the printer displays an error. | Make sure that the printer is set to direct thermal printing mode. |
| | | | | The ribbon is finished or the label supply hub is not moving. | Replace the ribbon roll. |
| |  | Media Error | 2 x 2 beeps | No paper is detected. | Make sure that the label sensor is positioned correctly. If the sensor still does not detect the paper, run the auto-detection function again. |
| | | | | Paper is finished. | Replace the label roll. |
| | | | | Printer feed problem. | Possible reasons: the print medium has become trapped around the rubber roll; the sensor cannot detect a gap or black mark between the labels; there is no paper. Please reset the sensor. |
| |  | File Error | 2 x 2 beeps | The memory is full. The printer prints the message "File System full". | Delete unnecessary data or install additional memory. |
| | | | | Unable to find file. The printer prints the message "File Name Not Found". | Use the "~X4" command to print all files. Then check whether the files exist and whether the names are correct. |
| | | | | A file of the same name already exists. The printer prints the message "Duplicate Name". | Change the name of the file and try storing it again. |

Table 2 Error Alerts in Operation Panel

6.3 Label Calibration and Self Test

Label Calibration

The printer can automatically detect and store label height. That means the host computer does not need to transmit the label height to the printer.

Self Test

Self-test function lets you check whether the printer is functioning normally. Here is how you run the label size calibration and self test.

1. Check that the label stock is loaded correctly.
2. Turn off the printer.
3. Turn the printer on again, keeping the FEED button pressed. When the LED starts to flash red, release the FEED button. The printer will now measure the label stock and store the label height.
4. Once the printer has successfully measured the label stock, it will print a self-test label.

The contents of a self-test printout are listed below.

| | |
|---|---------------------------------------|
| Modell & Version | MACH1/200:GX.XXX |
| USB ID setting | USB S/N:12345678 |
| Serial port setting | Serial port:96,N,8,1 |
| MAC address of Ethernet port | MAC Addr:xx-xx-xx-xx-xx-xx |
| IP protocol setting | DHCP Enable |
| IP address of Ethernet port | IP xxx.xxx.xxx.xxx |
| Gateway setting | Gateway xxx.xxx.xxx.xxx |
| Netmask setting | Sub-Mask xxx.xxx.xxx.xxx |
| | ##### |
| Number of DRAM installed | 1 DRAM installed |
| Image buffer size | Image buffer size:1500 KB |
| Number of forms | 0000 FORM(S) IN MEMORY |
| Number of graphics | 0000 GRAPHIC(S) IN MEMORY |
| Number of fonts | 000 FONT(S) IN MEMORY |
| Number of Asian fonts | 000 ASIAN FONT(S) IN MEMORY |
| Number of Databases | 000 DATABASE(S) IN MEMORY |
| Number of Scalable fonts | 000 TTF(S) IN MEMORY |
| Free memory size | 4073 KB FREE MEMORY |
| Speed, Density, Ref. Point, Print direction | ^S4 ^H8 ^R000 ~R200 |
| Label width, Form length, Stop position | ^W102 ^Q100,3 ^E18 |
| Cutter, Label Dispenser, Mode | Option:^D0 ^O0 ^AD |
| Sensor Setting | Reflective AD:1.96 2.84 2.49[0.88_23] |
| Code Page | Code Page:850 |
| Printer is on factory default | Default state=Yes |

Label Calibration Button

**Note!**

Keep pressing calibration button for 1 second, the printer can immediately run the label size calibration.

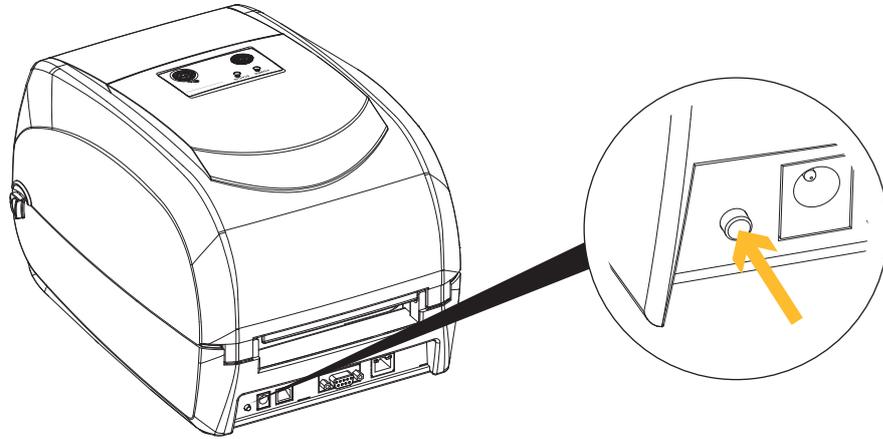


Fig. 20 Label Calibration Button

**Note!**

The printer does not require any maintenance.

Apart from consumables (ribbon / label stock), no mechanical components have to be set up or changed in order to operate the device.

7.1 Cleaning

7.1.1 General Cleaning Information

**Danger!**

Risk of death via electric shock!

► Disconnect the printer from the power supply before performing any maintenance work.

The printer requires very little maintenance.

It is important to clean the thermal printheads regularly. This guarantees a consistently good printed image and plays a major part in preventing premature wear of the printhead.

Otherwise, the maintenance is limited to monthly cleaning of the device.

**Attention!**

The printer can be damaged by aggressive cleansers.

► Do not use abrasive cleaners or solvents for cleaning the external surfaces or modules.

1. Remove dust and paper fluff from the print area with a soft brush or vacuum cleaner.
2. The cover of the printer can be cleaned with a standard cleanser.

7.1.2 Cleaning the Print Head

Dirt on the print head or ribbon, or glue residue from the label stock may result in inadequate print quality. The printer cover must therefore always be closed during printing. Keeping dirt and dust away from the paper or labels ensures a good print quality and a longer lifespan of the print head.

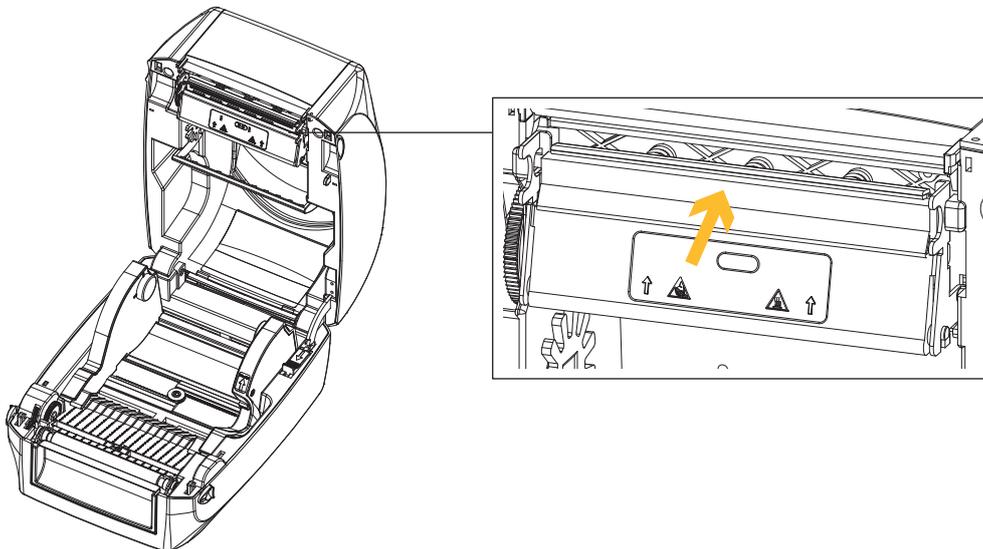


Fig. 21 Cleaning the Print Head

**Attention!****Printheads can be damaged!**

- ▶ Do not use sharp or hard objects to clean the printheads.
- ▶ Do not touch protective glass layer of the printheads with fingers.

**Attention!****Risk of injury from the hot printhead lines.**

- ▶ Ensure that the printheads have cooled down before starting cleaning.

Cleaning Steps

1. Turn off the printer.
2. Open the printer cover.
3. Remove the ribbon.
4. To remove any label residue or other dirt from the print head (see arrow), please use a soft lint-free cloth dipped in alcohol.

7.2 Troubleshooting

| Problem | Solution |
|---|--|
| The printer is switched on but the LED does not light up. | ▶ Check the power supply. ▷ 3.1.1 on page 10 |
| The LED lights up red and printing is interrupted. | <ul style="list-style-type: none"> ▶ Check the software settings (driver settings) or command codes. ▶ Look for the error alert. ▶ Check whether the print mechanism is closed correctly. |
| The label stock passes through the printer but no image is printed. | <ul style="list-style-type: none"> ▶ Please make sure that the label stock is loaded the right way up and that it is suitable material. ▶ Choose the correct printer driver. ▶ Choose the correct label stock and a suitable printing mode. |
| The label stock jams during printing. | ▶ Clear the paper jam. Remove any label material left on the thermal print head and clean the print head using a soft lint-free cloth dipped in alcohol. ▷ 7.1.2 on page 25 |
| There is no printed image on some parts of the label. | <ul style="list-style-type: none"> ▶ Check whether any label material or ribbon is stuck to the thermal print head. ▶ Check for errors in the application software. ▶ Check whether the starting position has been set correctly. ▶ Check the ribbon for wrinkles. |
| There is no printed image on part of the label or the image is blurred. | <ul style="list-style-type: none"> ▶ Check the thermal print head for dust or other dirt. ▶ Use the internal “~T” command to check whether the thermal print head will carry out a complete print job. ▶ Check the quality of the print medium. |
| The printed image is positioned incorrectly. | <ul style="list-style-type: none"> ▶ Check whether there is paper or dust covering the sensor. ▶ Check whether the label stock is suitable. Contact your supplier. ▶ Check the paper guide settings. |
| A label is missed out during printing. | <ul style="list-style-type: none"> ▶ Check the label height setting. ▶ Check whether there is dust covering the sensor. ▶ Run the auto-detection function. ▷ 6.3 on page 23 |
| The printed image is blurred. | <ul style="list-style-type: none"> ▶ Check the darkness setting. ▶ Check the thermal print head for dust or dirt. ▷ 7.1.2 on page 25 |

| Problem | Solution |
|---|---|
| The cutter * does not cut off the labels in a straight line. | ▶ Check whether the label stock is positioned straight. |
| The cutter * does not cut off the labels completely. | ▶ Check whether the label is more than 0.2 mm thick. |
| When using the cutter *, the labels are not fed through or cut off incorrectly. | ▶ Check whether the cutter has been correctly installed. ▶ Check whether the paper guides are functioning correctly. |
| The present sensor * is not functioning normally. | ▶ Check whether there is dust on the present sensor. ▶ Check whether the label stock is positioned correctly. |

Table 3 Troubleshooting

**Note!**

If any problems occur that are not described here, please contact your dealer.

8.1 Preparation Steps

**Note!**

The accessories, Present Sensor and cutter, can only be installed separately. They cannot be combined.

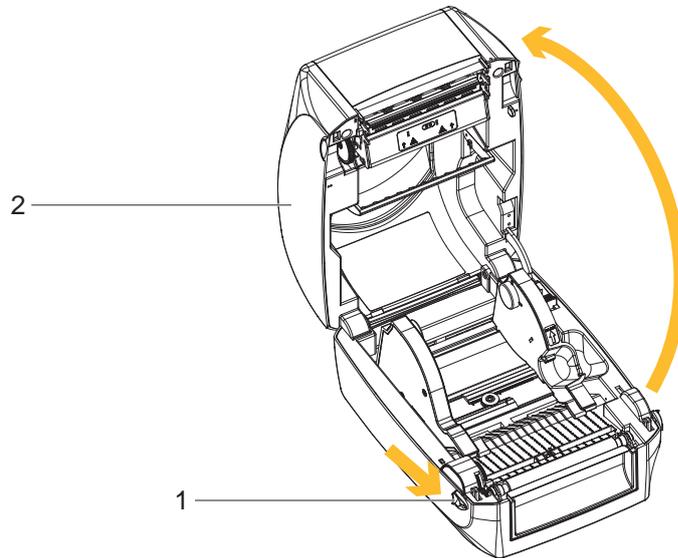
Open the Printer

Fig. 22 Open the printer

- ▶ Place the printer on a flat surface.
- ▶ Pull the cover release catches (1) on both sides of the printer.
- ▶ Raise the cover of the casing (2) and lock it into the catch.

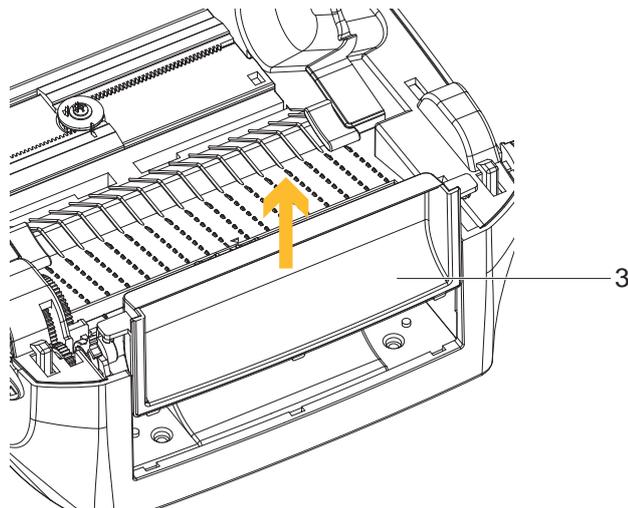
Remove the front cover

Fig. 23 Remove the front cover

- ▶ Pull upward to remove the front cover (3).

Remove the platen

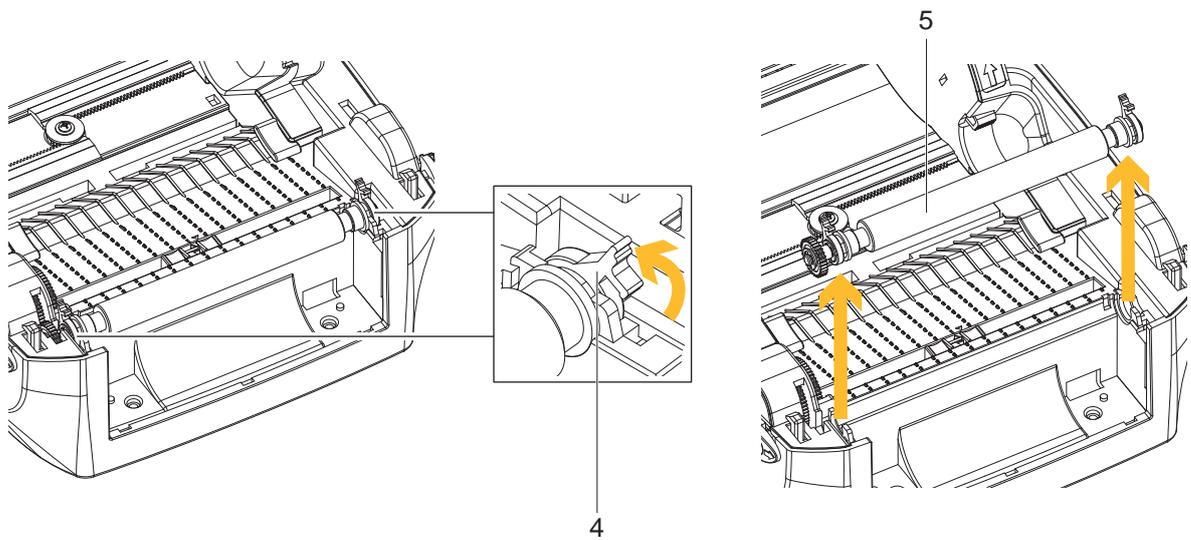


Fig. 24 Remove the platen

- ▶ Lift up the release clips (4) on both sides of the platen (5).
- ▶ Pull upward the platen (5).



Note!
Load the ribbon and the label.
For further information ▷ 4 on page 12.

8.2 Installing the Present Sensor



Note!

A label liner thickness of $0.006 \text{ mm} \pm 10\%$ and a weight of $65 \text{ g/m}^2 \pm 6\%$ are recommended.

The Present Sensor will take labels up to a max. width of 118 mm.

When using the Present Sensor, set the stop position (printer command ^E) to 13.

The Overview of the Label Dispenser

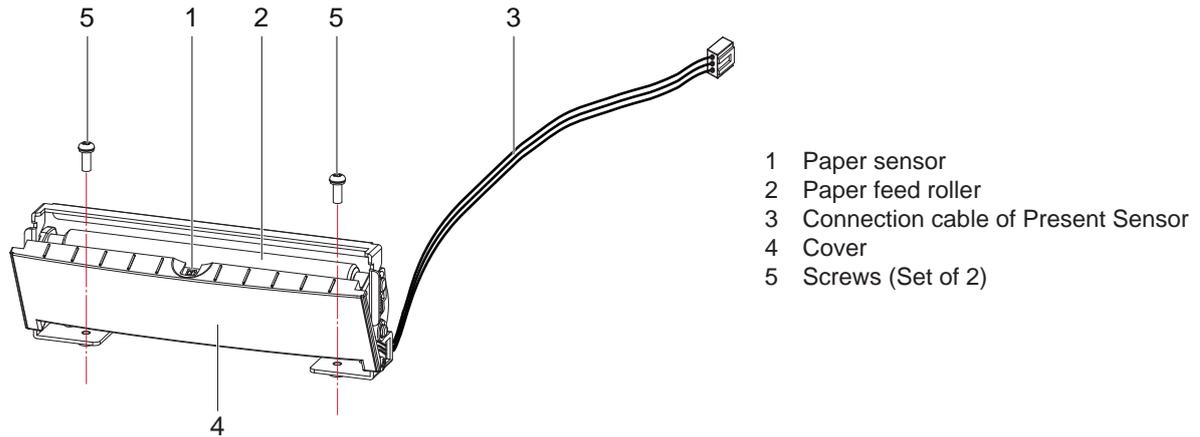


Fig. 25 Overview of the Label Dispenser

Preparation Steps



Note!

Please see the Section [8.1](#) on page 28 Preparation Steps to complete the preparation steps before installing the Present Sensor

Installing the Present Sensor

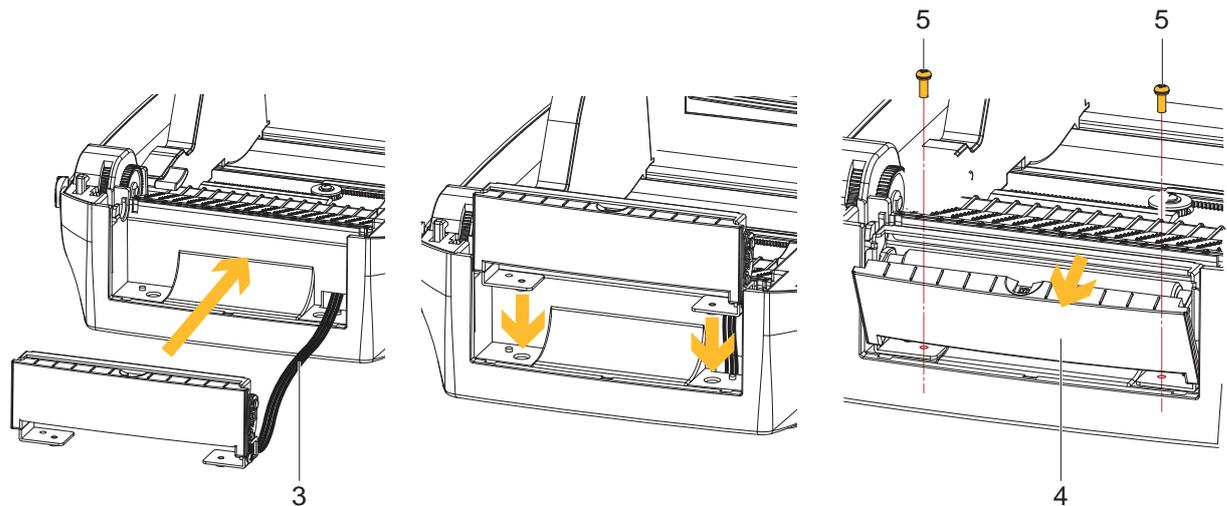


Fig. 26 Installing the Present Sensor

1. Pass the connection cable (3) through the slot of the printer.
2. Place Present Sensor to align both holes of screw at the printer.
3. Open the cover (4).
4. Tighten the screws (5).

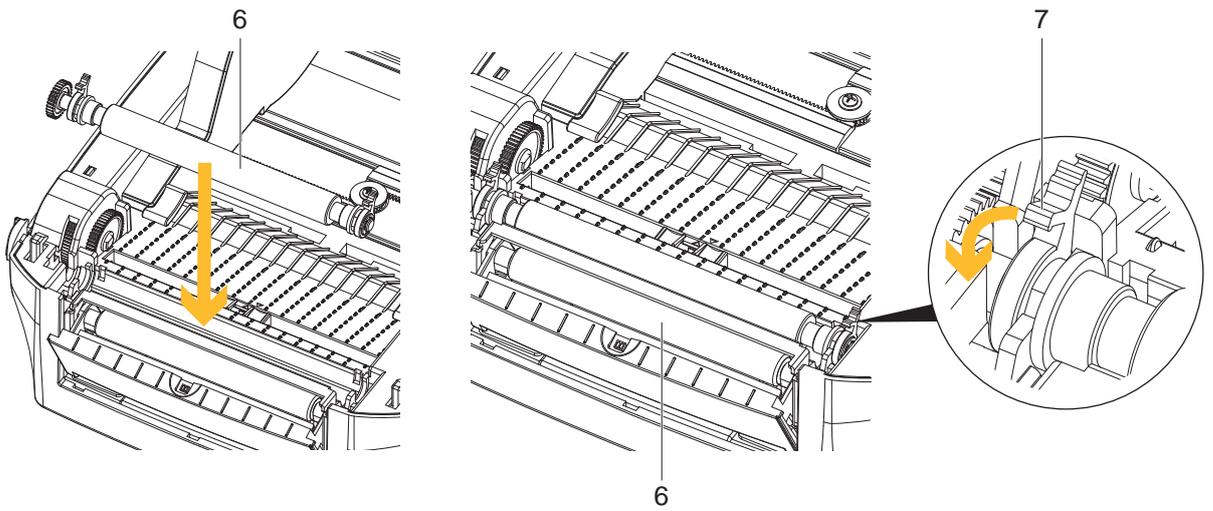


Fig. 27 Place the platen

- 5. Place the platen (6) back to the printer.
- 6. Lock the platen (6) with the clips (7) on both sides.

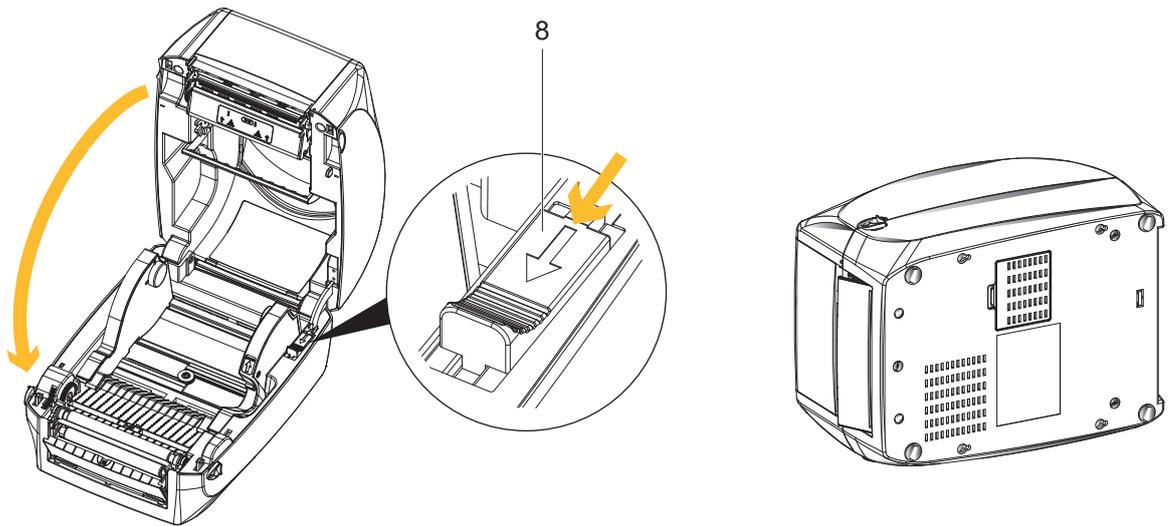


Fig. 28 Closing the and turning printer

- 7. Release catch for closing the printer cover (8) and close the printer.
- 8. Turn the printer upside down.

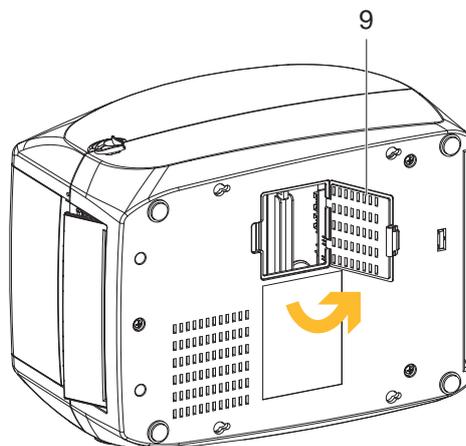


Fig. 29 Open the cover of module connection jacks

- 9. Open the cover of module connection jacks (9) on the bottom of printer.

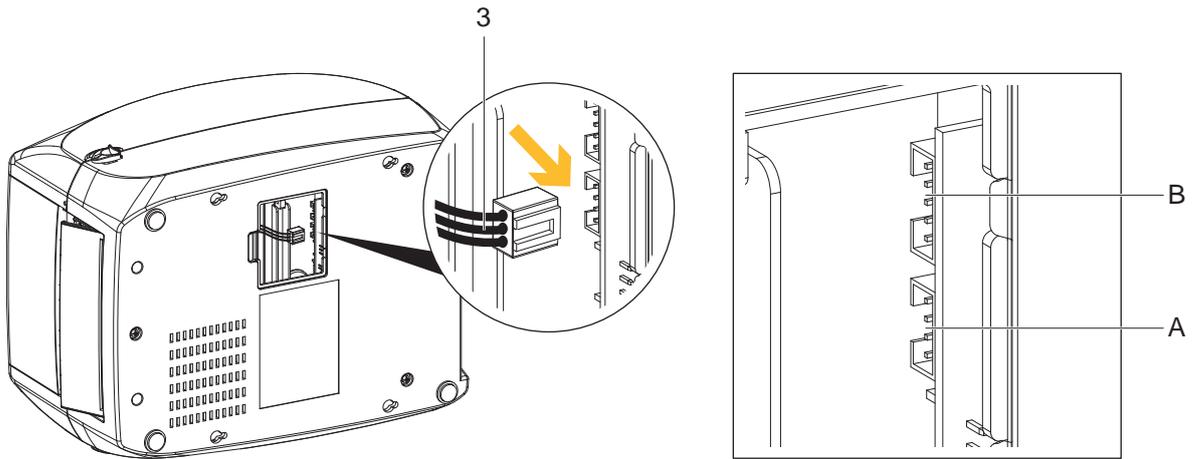


Fig. 30 Plug the connector

10. Plug the connector (3) to the Present Sensor to the lower jack (A).



Note!

There are 2 jacks : the lower jack (A) for the Present Sensor, the upper jack (B) for the cutter.

11. Close the cover of the module connection jacks on the bottom of the printer.

12. Turn back the printer into operating position.

Loading Label Roll with the Present Sensor Module

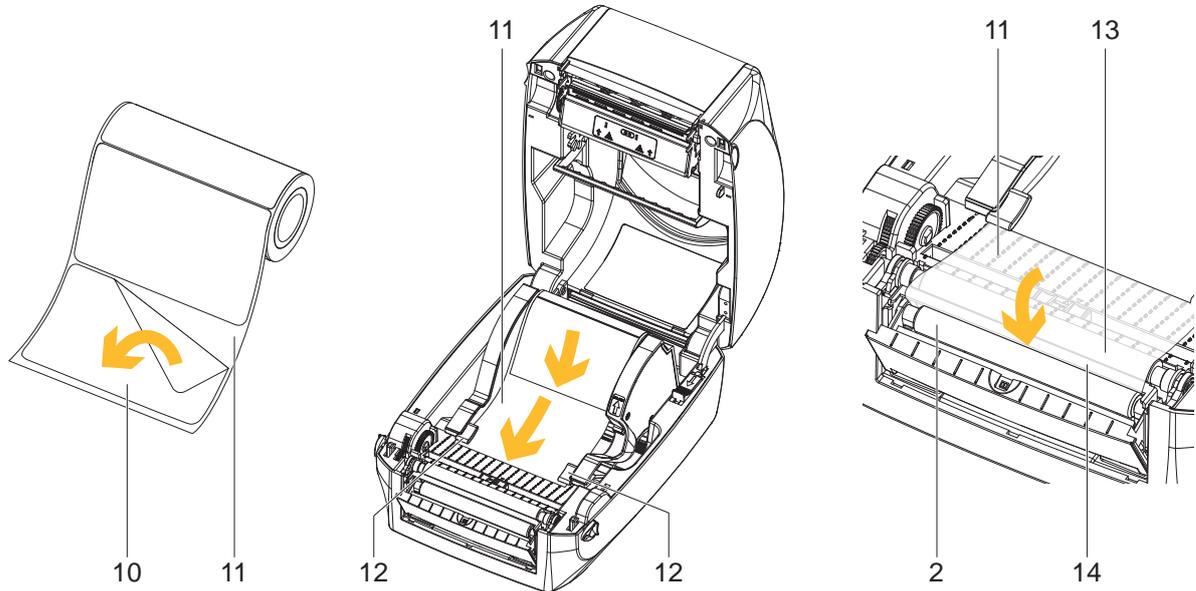


Fig. 31 Loading label roll

1. Remove the first label (10) from the label liner (11).
2. Open the printer and load the label roll ▶ 4.3 on page 15.
3. Feed the label stock (11) on both sides through the label guides (12).
4. Pull the label liner over the platen (13) and the steel (14).
5. Pull the label liner through the steel (14) and the paper feed roller (2) of the Present Sensor.

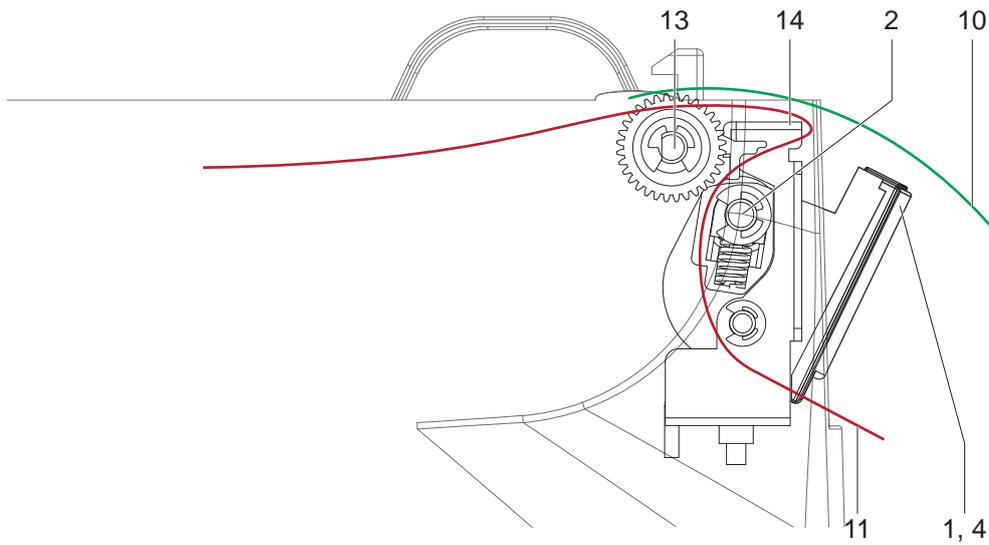


Fig. 32 Feeding path of label and liner

6. Push the label liner (11) forwards until it appears at the underside of the Present Sensor.
7. Detach two test labels (10), and feed them over the cover (4) with the paper sensor (1).

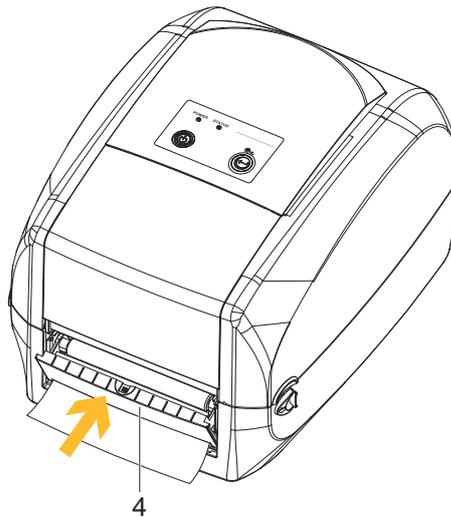


Fig. 33 Closing the cover

8. Release catch for closing the printer cover and close the printer.
9. Close the cover (4) of the Present Sensor.

Function Test

1. Switch the printer on.
2. Press the FEED button (15).
3. Label is transported forwards and detached from the backing material.

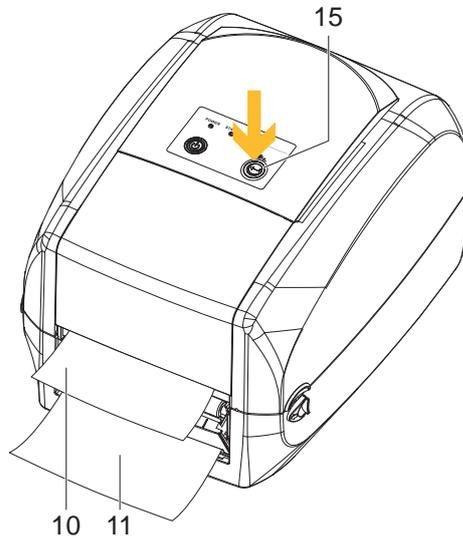


Fig. 34 Function of Present Sensor

**Note!**

The label (10) will be peeled from the liner (11) while it passes through the Present Sensor.

There is a paper sensor on the Present Sensor module. It will stop the printing if it is covered by label. Remove the last printed label and the printer will then continue to print next label.

8.3 Installing the Cutter




Note!

Do not use to cut adhesive labels! Glue residue will be left on the cutter blade and impair its functioning. You can cut paper with a max. width of 116 mm. Labels should be at least 30 mm high.

We advise against using inside wound label stock.

With the cutter installed, set the stop position to 30, and the E value to 30.

The Overview of the Cutter

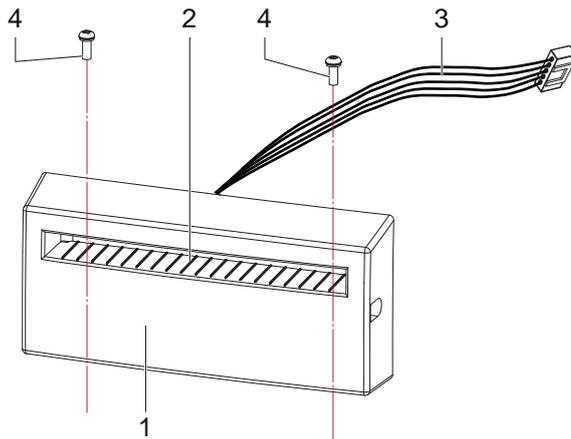

- 1 Cover
- 2 Feed-out slot
- 3 Connection cable of the Cutter
- 4 Screws (Set of 2)

Fig. 35 Overview of the Cutter

Preparation Steps



Note!

Please see the Section ▷ 8.1 on page 28 Preparation Steps to complete the preparation steps before installing the Cutter.

Installing the Cutter

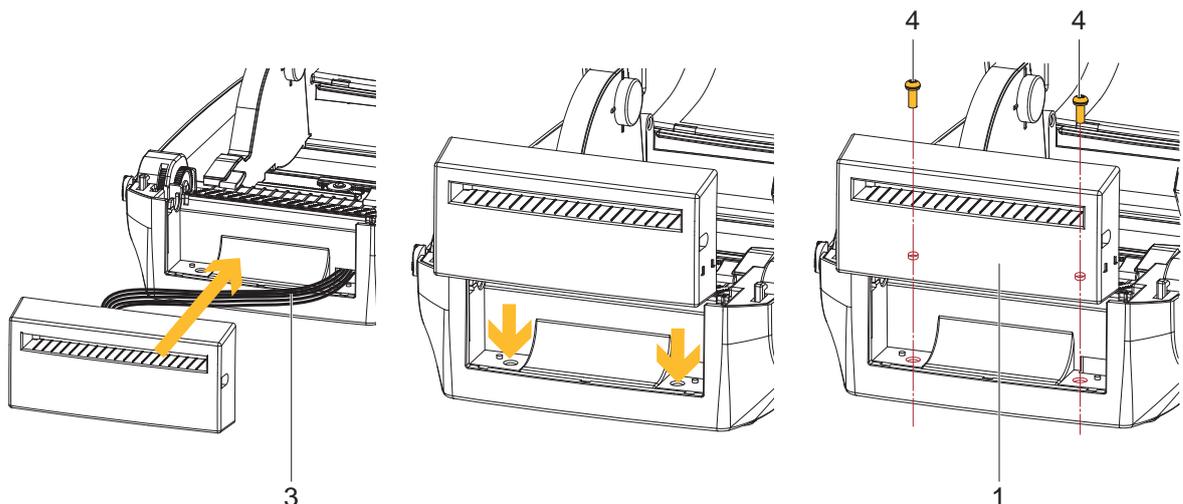


Fig. 36 Installing the Cutter

1. Pass the connection cable (3) through the slot of the printer.
2. Place the Cutter (1) to align both holes of screw at the printer.
3. Tighten the screws (4).

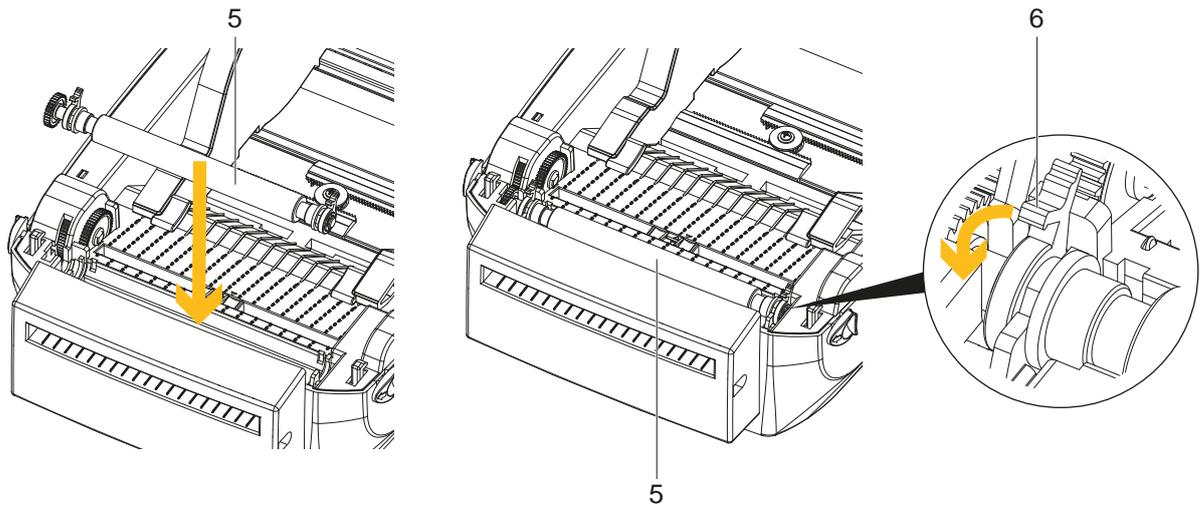


Fig. 37 Place the platen

4. Place the platen (5) back to the printer.
5. Lock the platen (5) with the clips (6) on both sides.

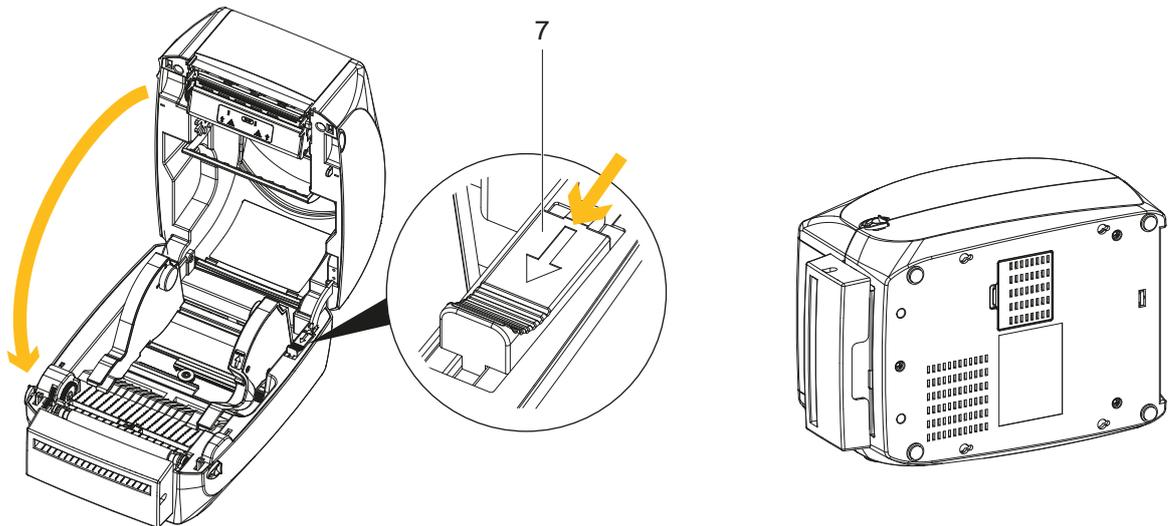


Fig. 38 Closing the and turning printer

6. Release catch for closing the printer cover (7) and close the printer.
7. Turn the printer upside down.

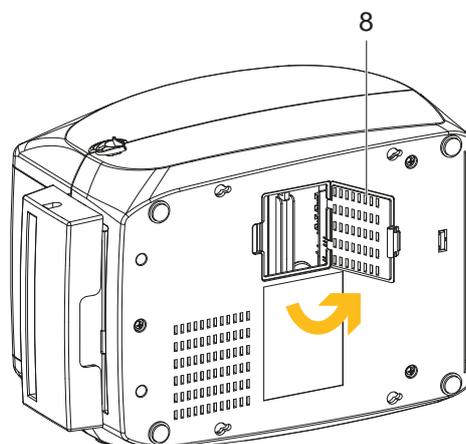


Fig. 39 Open the cover of module connection jacks

8. Open the cover of module connection jacks (8) on the bottom of printer.

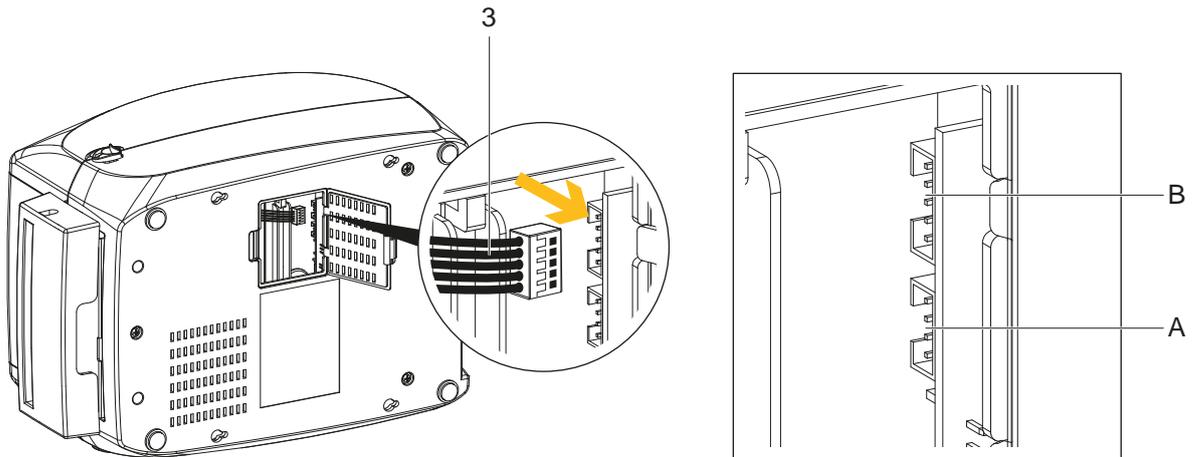


Fig. 40 Plug the connector

9. Plug the connector (3) to the Cutter to the upper jack (B).



Note!

There are 2 jacks : the lower jack (A) for the Present Sensor, the upper jack (B) for the cutter.

10. Close the cover of the module connection jacks on the bottom of the printer.

11. Turn back the printer into operating position.

Loading Label Roll with the Cutter

1. Open the printer and load the label roll ▷ 4.3 on page 15.

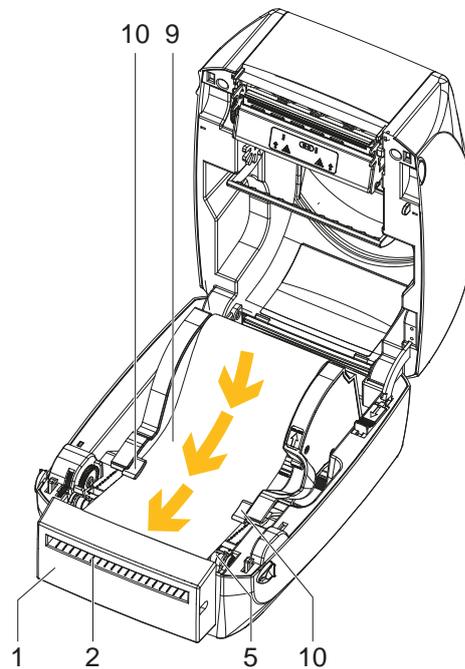


Fig. 41 Loading label roll

2. Feed the label stock (9) on both sides through the label guides (10).

3. Pull the label stock (9) over the platen (5) and through the feed-out (2) slot of the cutter (1).

4. Release catch for closing the printer cover and close the printer.

Function Test

1. Switch the printer on.
2. Press the FEED button (11) to set the label position.
3. Label is transported forwards and cut.

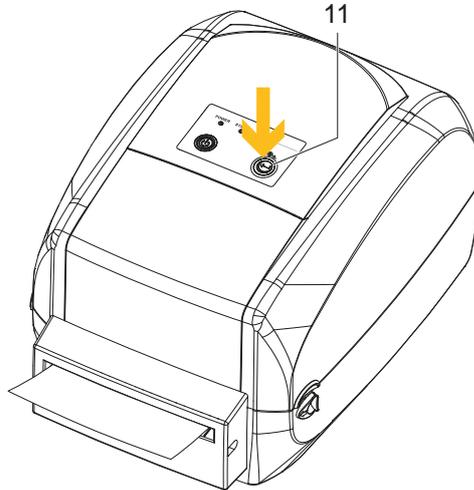


Fig. 42 Function test of the cutter

9.1 Technical Data

| Label Printer ¹⁾ | | MACH1/200 | MACH1/300 |
|--|-------------------------------|----------------------------------|------------------------------|
| Print Head | | | |
| Printing method | | Thermal transfer, direct thermal | |
| Printable resolution | dpi | 203 | 300 |
| Print speed | up to mm/s | 127 | 102 |
| Print width | up to mm | 108 | 105.7 |
| Material ²⁾ | | | |
| Paper, cardboard, plastics continuous material on a roll or fanfold | | ■ | |
| Width | Labels | mm | 25 - 112 |
| | Liner continuous material | mm | 25 - 118 |
| Label height | at least mm | | 4 |
| | up to mm | | 1,727 762 |
| Thickness | mm | | 0,06 - 0,2 |
| Weight | g/m ² | | 60 - 160 |
| Roll | Outer diameter | up to mm | 127 |
| | Core diameter | mm | 25.4 - 38.1 |
| Winding | Outside or inside | | |
| Ribbon | | | |
| Ink side | Outside or inside | | |
| Roll diameter | up to mm | | 68 |
| Core diameter | mm | | 25.4 |
| Variable length | up to m | | 300 |
| Width | mm | | 25 - 114 |
| Printer size and weights | | | |
| Width x Height x Depth | mm | | 210 x 186 x 280 |
| Weight | kg | | 2.7 |
| Label sensor with position indication | | | |
| Gap sensor | Fixed at center | | |
| Reflective sensor from below | Adjustable | | |
| Electronics | | | |
| Storage | Flash | MB | 16 |
| | SDRAM | MB | 8 (4 MB for the application) |
| Battery for current date/time, real-time clock | | ■ | |
| Interfaces | | | |
| RS232C | ■ | | |
| USB for PC connection | ■ | | |
| Ethernet | ■ | | |
| USB host | - | | |
| Operating data | | | |
| Power supply | 100 - 240 VAC ~ 50/60 Hz, PFC | | |
| Power consumption | up to W | | 60 |
| Temperature / humidity | Operation | 5 - 40°C / 30 - 85% not cond. | |
| | Storage | -20 - 50°C / 10 - 90% not cond. | |
| | Transport | -25 - 60°C / 20 - 80% not cond. | |
| Approvals | CE, FCC, CCC, CB, UL, KCC | | |

| Label Printer ¹⁾ | | MACH1/200 | MACH1/300 |
|---|--|-------------------|-----------|
| Operation panel | | | |
| Buttons | Feed | | ■ |
| | On/Off | | ■ |
| | Material sensor calibration | | ■ |
| LEDs | Ready | | ■ |
| | Status | | ■ |
| Colored TFT display with navigator pad | | | - |
| On Display | | | |
| | none | | |
| Control | | | |
| | End of ribbon End of material Print head open | | |
| Testing | | | |
| System diagnosis | When device is switched on, including print head detection | | |
| Short status report, status printout | Printer settings | Analysis | |
| | Label settings | Finish | |
| | Accessories | Label calibration | |
| | Test printout | | |
| Fonts | | | |
| Font types | 11 bitmap fonts including OCR-A, OCR-B | | |
| Character sets | Codepage 437, 737, 850 bis 852, 855, 857, 860 bis 863, 865, 866, 869 Windows 1250 to 1255, 1257 | | |
| Bitmap fonts | Zoom factor up to eight times width and height; orientation 0°, 90°, 180°, 270° | | |
| Graphic formats | | | |
| | PCX, BMP | | |
| Barcodes | | | |
| 1D codes | Code 39 | UCC/EAN 128 Kmart | |
| | Code 9 | Random Weight | |
| | EAN 8, 13 (Add-ons 2 und 5) | Post NET | |
| | UPC A, E (Add-ons 2 und 5) | ITF 14 | |
| | Interleaved 2/5 (with Shipping Bearer Bars) | China Postal Code | |
| | Codabar | HIBC | |
| | Code 128 A, B, C | MSI | |
| | EAN 128 | Plessey | |
| | RPS 128 | Telepen | |
| | UCC 128 | FIM | |
| 2D codes | PDF417 | GS1 DataBar | |
| | DataMatrix | Micro PDF417 | |
| | MaxiCode | Micro QR-Code | |
| | QR-Code | Aztec | |

| Label Printer ¹⁾ | MACH1/200 | MACH1/300 |
|---|--|---|
| Software | | |
| Printer languages | EZPL, ZPL, EPL | |
| Label software | cablabel S3 Lite cablabel S3 Viewer cablabel S3 Pro | |
| Windows drivers certified 32/64 bit for | Windows Vista Windows 7 Windows 8 Windows 8.1 Windows 10 | Server 2003 Server 2008 Server 2008 R2 Server 2012 Server 2012 R2 |

Table 4 Technical Data

- Standard
- Option

¹⁾ All information on the design and technical specifications correspond to the date of the printing. Subject to change. For current data see website www.cab.de/labelprinter.

²⁾ Limitations may apply to small labels, thin materials or strong adhesives. These applications need to be tested and approved.

9.2 Interface

Pinout Description

- **USB**

Connector Type: Type B

| Pin No. | 1 | 2 | 3 | 4 |
|----------|------|----|----|-----|
| Function | VBUS | D- | D+ | GND |

Table 5 Pinout description USB Interface

- **Serial Port**

Default settings:

Baud rate 9600, no parity, 8 data bits, 1 stop bit, XON/XOFF protocol and RTS/CTS

| RS232 Housing (9-pin to 9-pin) | | |
|--------------------------------|------|--------------------|
| DB9 Socket | | DB9 Plug |
| - | 1__1 | +5 V, max. 500 mA* |
| RXD | 2__2 | TXD |
| TXD | 3__3 | RXD |
| DTR | 4__4 | N/C |
| GND | 5__5 | GND |
| DSR | 6__6 | RTS |
| RTS | 7__7 | CTS |
| CTS | 8__8 | RTS |
| RI | 9__9 | N/C |
| Computer | - | Printer |

Table 6 Pinout description Serial Port

* The total current to the serial port may not exceed 500 mA.

9.3 Reference to the EU Declaration of Conformity

The printers of the MACH series comply with the relevant fundamental regulations of the EU Rules for Safety and Health:

- Directive 2014/35/EU relating to electrical equipment designed for use within certain voltage limits
- Directive 2014/30/EU relating to electromagnetic compatibility
- Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment

EU Declaration of Conformity

▷ <https://www.cab.de/media/pushfile.cfm?file=2835> 



9.4 FCC

NOTE : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. The equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user may be required to correct the interference at his own expense.

| | | |
|----------------------------|----------|----------------------------|
| A | | Power plug..... 10 |
| Accessories | 28 | Power Supply |
| B | | 10 39 |
| Box Content..... | 6 | Present Sensor..... |
| C | | 28 30 |
| cabalbel S3..... | 18 | Printer Driver |
| Cleaning | 25 | 17 |
| Configuration | 19 | Print Head..... |
| Cutter..... | 28 35 | 25 39 |
| E | | Printing Mechanism |
| Environment | 5 | 9 |
| Error Alerts..... | 22 | R |
| Ethernet Port | 7 | Ribbon |
| F | | 12 39 |
| FEED Button..... | 7 21 | Ribbon Rewind Module |
| Fonts..... | 40 | 14 |
| Function Test | 16 34 38 | Ribbon Supply Module |
| G | | 13 |
| Graphic formats..... | 40 | S |
| I | | Safety Instructions..... |
| Important information..... | 4 | 5 |
| Intended Use | 4 | Self Test..... |
| Interface..... | 41 | 23 |
| L | | Serial Port..... |
| Label Calibration..... | 24 | 7 41 |
| Label guide plates | 15 | Service work..... |
| Labeling Software..... | 18 41 | 5 |
| Label Roll..... | 32 37 | Set up printer..... |
| Label sensor | 39 | 6 |
| Label Stock..... | 15 | Software |
| LED Power | 7 21 | 17 |
| LED Status | 7 21 | Supply voltage..... |
| Leporello labels | 16 | 10 |
| Lithium battery | 5 | Switching on |
| Loading Material | 12 | 11 |
| M | | System diagnosis |
| Mach1/2-Load..... | 19 | 40 |
| Material..... | 39 | T |
| O | | Temperature |
| Operation Panel..... | 21 40 | 39 |
| Overview..... | 6 | Troubleshooting..... |
| P | | 26 |
| Platen | 29 31 36 | U |
| POWER Button..... | 7 21 | Unpacking..... |
| Power cord | 6 | 6 |
| | | USB Port..... |
| | | 7 41 |
| | | V |
| | | Voltage..... |
| | | 5 |
| | | W |
| | | Warning stickers |
| | | 5 |
| | | Weight |
| | | 39 |
| | | Windows drivers |
| | | 41 |